OMEGA-PHONE.



Owner's Manual

SOFTWARE VERSION 7.30

IWATSU

SPECIAL NOTICE

CONVERSATION RECORDING

In certain states it is illegal to intercept and/or record telephone calls.

In certain states and under certain circumstances it is illegal to intercept for the purposes of listening in and/or recording telephone calls. Because such activity is not illegal in all jurisdictions and may be permitted in training and/or monitoring of personnel, this telephone system can be programmed to permit interception and/or recording with or without warning to those on the line. Before utilizing the system for such purposes, you are advised to consult with an attorney familiar with laws of the jurisdiction in which you utilize such feature.

Iwatsu America, Inc., its distributors, and the manufacturers responsible for this feature make no representations with respect to the legality of its use and disclaim any liability for claims and/or damages arising from the use or misuse of this feature.

TOLL RESTRICTION

The Toll Restriction feature of the ADIX-VS system is one method of preventing fraud (i.e., the making of unauthorized toll calls) by users of the system. The chance of fraud may be reduced but may not be eliminated. Therefore, no expressed or implied warranty is made against fraud. Only a complete program which includes but may not be limited to inspection of telephone call billing, use of call detail recorders and other such devices, systematic monitoring of all telephone call activity, and implementing corrective measures can minimize the possibility of fraud. Consult with your Authorized Iwasu America Distributor for further details or assistance in the event you are experiencing unauthorized toll calls.

All brand names and product names used in this manual are trademarks of their respective companies.

Iwatsu America, Inc., 8001 Jetstar Drive, Irving, TX 75063, (972) 929-0242 Email: info@iwatsu.com, Web: www.iwatsu.com © 2002 by Iwatsu America, Inc. All rights reserved.

Software Version 7.30 Edition September 2002

Printed in the United States of America

All rights are reserved. No part of this manual or accompanying software may be reproduced, in any form or any means, without the permission of Iwatsu America, Inc.

This manual was written for ADIX-VS systems with version 7.30 software. In some cases, available feature operations may differ from those listed in this manual, depending on the hardware, software and programmed functions in your ADIX-VS system. For more information contact your Authorized Iwatsu Distributor.

Iwatsu America, Inc. has used its best effort to ensure that the information in this manual was accurate at the time of printing. Iwatsu America, Inc. makes no warranty of any kind, expressed or implied, with regard to the contents of this manual. This information is subject to change without notice.

Iwatsu America, Inc. shall not be held responsible for any representation made regarding this information by any individual.

Part Number: 108322

Contents

SECTION 1 - ADIX-VS GENERAL DESCRIPTION1
FCC Registration and Requirements3
ADIX-VS System Components Overview8
Components
ADIX-VS Hardware Capacities
Key Telephone Lamp Indications 11
Station Port Requirements 11
Time Parameters 11
System Numbering Plan 11
ADIX-VS Digital Telephones12
IX-12KTS-3 Digital Key Telephone
IX-12KTS-3 Digital Key Display Telephone
IX-12KTS-2 Digital Multiline Telephones (Discontinued) 13
IX-12KTD-2 Digital Multiline Telephones
IX-MKT Digital Key Telephone15
DCKT970 Digital Wireless Key Telephone 16
IX-DCKT900 Digital Wireless Key Telephone (Discontinued). 17
Digital Doorphones 17
Single Line Telephones 17
ADIX-VS Digital Telephone Key Functions
ADIX-VS Digital Telephone Key Functions18
ADIX-VS Digital Telephone Key Functions18 Optional Station Equipment20
ADIX-VS Digital Telephone Key Functions
ADIX-VS Digital Telephone Key Functions
ADIX-VS Digital Telephone Key Functions
ADIX-VS Digital Telephone Key Functions18Optional Station Equipment20IX-COMLINK-220IX-KTLCD-3 Display Unit (IX-12KTD / S-3 only)20IX-12ELK-3 (IX-12KTD / S-3 only)20IX-LRAU (IX-12KTD / S-3 only)20
ADIX-VS Digital Telephone Key Functions18Optional Station Equipment20IX-COMLINK-220IX-KTLCD-3 Display Unit (IX-12KTD / S-3 only)20IX-12ELK-3 (IX-12KTD / S-3 only)20IX-LRAU (IX-12KTD / S-3 only)20IX-12ELK Key Telephone Expansion Module21
ADIX-VS Digital Telephone Key Functions18Optional Station Equipment20IX-COMLINK-220IX-KTLCD-3 Display Unit (IX-12KTD / S-3 only)20IX-12ELK-3 (IX-12KTD / S-3 only)20IX-LRAU (IX-12KTD / S-3 only)20IX-12ELK Key Telephone Expansion Module21IX-SNHD Station Noise Canceling Handset21IX-SHHD Station Amplified Handset21IX-BPCU (IX-12KTD / S-3 only)21
ADIX-VS Digital Telephone Key Functions18Optional Station Equipment20IX-COMLINK-220IX-KTLCD-3 Display Unit (IX-12KTD / S-3 only)20IX-12ELK-3 (IX-12KTD / S-3 only)20IX-LRAU (IX-12KTD / S-3 only)20IX-12ELK Key Telephone Expansion Module21IX-SNHD Station Noise Canceling Handset21IX-SHHD Station Amplified Handset21IX-BPCU (IX-12KTD / S-3 only)21IX-SP Station Loud-Ringer/ External Speakerphone Adapter21
ADIX-VS Digital Telephone Key Functions18Optional Station Equipment20IX-COMLINK-220IX-KTLCD-3 Display Unit (IX-12KTD / S-3 only)20IX-12ELK-3 (IX-12KTD / S-3 only)20IX-LRAU (IX-12KTD / S-3 only)20IX-12ELK Key Telephone Expansion Module21IX-SNHD Station Noise Canceling Handset21IX-SHHD Station Amplified Handset21IX-BPCU (IX-12KTD / S-3 only)21IX-SP Station Loud-Ringer/ External Speakerphone Adapter21IX-AUTD Auto-Dialer Unit21
ADIX-VS Digital Telephone Key Functions18Optional Station Equipment20IX-COMLINK-220IX-KTLCD-3 Display Unit (IX-12KTD / S-3 only)20IX-12ELK-3 (IX-12KTD / S-3 only)20IX-LRAU (IX-12KTD / S-3 only)20IX-12ELK Key Telephone Expansion Module21IX-SNHD Station Noise Canceling Handset21IX-SHHD Station Amplified Handset21IX-BPCU (IX-12KTD / S-3 only)21IX-BPCU (IX-12KTD / S-3 only)21IX-BPCU (IX-12KTD / S-3 only)21IX-BPCU (IX-12KTD / S-3 only)21IX-LRSP Station Loud-Ringer/ External Speakerphone Adapter21IX-AUTD Auto-Dialer Unit21IX-BPAD Busy Bypass/Auto-Dialer Unit21
ADIX-VS Digital Telephone Key Functions18Optional Station Equipment20IX-COMLINK-220IX-KTLCD-3 Display Unit (IX-12KTD / S-3 only)20IX-12ELK-3 (IX-12KTD / S-3 only)20IX-LRAU (IX-12KTD / S-3 only)20IX-12ELK Key Telephone Expansion Module21IX-SNHD Station Noise Canceling Handset21IX-SHHD Station Amplified Handset21IX-LRSP Station Loud-Ringer/ External Speakerphone Adapter21IX-AUTD Auto-Dialer Unit21IX-STPD Station Pedestal22
ADIX-VS Digital Telephone Key Functions18Optional Station Equipment20IX-COMLINK-220IX-KTLCD-3 Display Unit (IX-12KTD / S-3 only)20IX-12ELK-3 (IX-12KTD / S-3 only)20IX-LRAU (IX-12KTD / S-3 only)20IX-12ELK Key Telephone Expansion Module21IX-SNHD Station Noise Canceling Handset21IX-SHHD Station Amplified Handset21IX-BPCU (IX-12KTD / S-3 only)21IX-SPCU (IX-12KTD / S-3 only)21IX-SPCU (IX-12KTD / S-3 only)21IX-BPCU (IX-12KTD / S-3 only)21IX-BPCU (IX-12KTD / S-3 only)21IX-BPCU (IX-12KTD / S-3 only)21IX-STPD Station Loud-Ringer/ External Speakerphone Adapter2121IX-STPD Station Pedestal22IX-VTPD IX-MKT / Versa-Phone Pedestal22
ADIX-VS Digital Telephone Key Functions18Optional Station Equipment20IX-COMLINK-220IX-KTLCD-3 Display Unit (IX-12KTD / S-3 only)20IX-12ELK-3 (IX-12KTD / S-3 only)20IX-LRAU (IX-12KTD / S-3 only)20IX-12ELK Key Telephone Expansion Module21IX-SNHD Station Noise Canceling Handset21IX-SHHD Station Amplified Handset21IX-BPCU (IX-12KTD / S-3 only)21IX-SHHD Station Amplified Handset21IX-BPCU (IX-12KTD / S-3 only)21IX-BPCU (IX-12KTD / S-3 only)21IX-BPCU (IX-12KTD / S-3 only)21IX-STPD Station Loud-Ringer/ External Speakerphone Adapter2121IX-AUTD Auto-Dialer Unit21IX-STPD Station Pedestal22IX-VTPD IX-MKT / Versa-Phone Pedestal22IX-ADPD Autodial Pedestal22
ADIX-VS Digital Telephone Key Functions18Optional Station Equipment20IX-COMLINK-220IX-KTLCD-3 Display Unit (IX-12KTD / S-3 only)20IX-12ELK-3 (IX-12KTD / S-3 only)20IX-LRAU (IX-12KTD / S-3 only)20IX-12ELK Key Telephone Expansion Module21IX-SNHD Station Noise Canceling Handset21IX-SHHD Station Amplified Handset21IX-BPCU (IX-12KTD / S-3 only)21IX-SPCU (IX-12KTD / S-3 only)21IX-SPCU (IX-12KTD / S-3 only)21IX-BPCU (IX-12KTD / S-3 only)21IX-BPCU (IX-12KTD / S-3 only)21IX-BPCU (IX-12KTD / S-3 only)21IX-STPD Station Loud-Ringer/ External Speakerphone Adapter2121IX-STPD Station Pedestal22IX-VTPD IX-MKT / Versa-Phone Pedestal22

VS-PWSU Power Supply Description	
VS-MAIN Motherboard Interface Card	
VS-CPUMEM Common Control Card	23
System Port Interface Cards	25
VS-4PSUB Digital Station Interface Card	25
VS-VML Omega-Voice VMI Card	25
VS-2CITK Caller ID Trunk Interface Card	25
VS-ICOTB ISDN BRI Line Interface Card	26
VS-MISC Miscellaneous Function Card	26
IX-IPSEGWAY Serial to Ethernet Gateway	27
SECTION 2 - ADIX-VS SYSTEM FEATURES	29
ADIX-VS System Features	31
All Ring Hunt Group	
Alphanumeric Speed Dial By Name	
ANI Alphanumeric ID	
Automatic Number Identification (ANI) Trunks	
Automatic Relay Control	
Background Music	
Caller ID Alphanumeric ID	
Caller ID / ANI / DNIS Number Storage	
Call Forwarding	
Caller ID Trunks	33
Conversation Recording	33
Delayed Ringing	
DNIS Alphanumeric ID	
Dialed Number Identification Service (DNIS) Trunks	34
Direct Inward Line	34
Direct Inward Line - Hunt Group	35
Emergency 911 Service Using Area Routing	35
E-Response Help Call Feature	35
External Paging	35
Flexible Ringing	35
Flexible Station Numbering	36
Group Monitoring	36
Hunt Group Delayed Ringing	36
Internal Paging	36
ISDN Calling/Called Party Number Coding	
ISDN Lines	37
ISDN BRI Caller Name ID	
IX-MKT Key Assignment	
Loud Bell Interface	37
Master Hunt Group	38

	Monitor Improvements	38
	Music On Hold	38
	Optimized Routing	39
	Paging	
	Personal Ringing Tones	
	Power Failure Memory Backup	
	Power Failure Backup System	
	Quick Forward using the Hold/Quick Forward Key	
	Remote Programming/Diagnostics	
	Station Coaching	
	SMDR	
	Station Coaching	
	System Clock	
	System Speed Dial	
	Text Messaging	
	Toll Restriction	
	Tone / Pulse Dialing	
	Trunk Interfaces	
	Uniform Call Distribution (UCD)	
	Voice Mail/Automated Attendant Integration	43
SECTI	ON 3 - DIGITAL TELEPHONE USER'S GUIDE	45
		4-
Dig	gital Telephones – Basic Feature Operation	41
Dig	jital Telephones – Basic Feature Operation Making an Outgoing Call	
Dig		47
Dig	Making an Outgoing Call	47 47
Dig	Making an Outgoing Call Receiving an Incoming Call	47 47 48
Dig	Making an Outgoing Call Receiving an Incoming Call Making an Intercom Call Receiving an Intercom Call Making an E-Response Help Call	47 47 48 48 48
Dig	Making an Outgoing Call Receiving an Incoming Call Making an Intercom Call Receiving an Intercom Call Making an E-Response Help Call Transferring a Call to Another Extension	47 47 48 48 48 49
Diç	Making an Outgoing Call Receiving an Incoming Call Making an Intercom Call Receiving an Intercom Call Making an E-Response Help Call Transferring a Call to Another Extension Putting a Call On Hold	47 47 48 48 48 49 50
Diç	Making an Outgoing CallReceiving an Incoming CallMaking an Intercom CallReceiving an Intercom CallMaking an E-Response Help CallTransferring a Call to Another ExtensionPutting a Call On HoldPicking Up a Call On Hold	47 47 48 48 48 49 50 50
Diç	Making an Outgoing Call Receiving an Incoming Call Making an Intercom Call Receiving an Intercom Call Making an E-Response Help Call Transferring a Call to Another Extension Putting a Call On Hold Picking Up a Call On Hold Putting a Call On Call Park	47 48 48 48 49 50 50 50
Diç	Making an Outgoing Call Receiving an Incoming Call Making an Intercom Call Receiving an Intercom Call Making an E-Response Help Call Transferring a Call to Another Extension Putting a Call On Hold Picking Up a Call On Hold Putting a Call On Call Park Handling a Second Call.	47 47 48 48 49 50 50 50 50 51
Diç	Making an Outgoing Call Receiving an Incoming Call Making an Intercom Call Receiving an Intercom Call Making an E-Response Help Call Transferring a Call to Another Extension Putting a Call On Hold Picking Up a Call On Hold Putting a Call On Call Park	47 47 48 48 49 50 50 50 50 51
	Making an Outgoing Call Receiving an Incoming Call Making an Intercom Call Receiving an Intercom Call Making an E-Response Help Call Transferring a Call to Another Extension Putting a Call On Hold Picking Up a Call On Hold Putting a Call On Call Park Handling a Second Call.	47 47 48 48 48 49 50 50 50 51 52
	Making an Outgoing Call Receiving an Incoming Call Making an Intercom Call Receiving an Intercom Call Making an E-Response Help Call Transferring a Call to Another Extension Putting a Call On Hold Picking Up a Call On Hold Putting a Call On Call Park Handling a Second Call Digital Doorphone Operation	47 47 48 48 49 50 50 50 51 52 53
	Making an Outgoing Call Receiving an Incoming Call Making an Intercom Call Receiving an Intercom Call Making an E-Response Help Call Transferring a Call to Another Extension Putting a Call On Hold Picking Up a Call On Hold Putting a Call On Call Park Handling a Second Call Digital Doorphone Operation gital Telephones - Advanced Features	47 47 48 48 49 50 50 50 51 52 53
	Making an Outgoing Call Receiving an Incoming Call Making an Intercom Call Receiving an Intercom Call Making an E-Response Help Call Transferring a Call to Another Extension Putting a Call On Hold Picking Up a Call On Hold Picking Up a Call On Hold Putting a Call On Call Park Handling a Second Call Digital Doorphone Operation Galler ID, ANI, DNIS Information Storage Absence Message Display	47 47 48 48 49 50 50 50 51 52 53 53 54 55
	Making an Outgoing Call Receiving an Incoming Call Making an Intercom Call Receiving an Intercom Call Making an E-Response Help Call Transferring a Call to Another Extension Putting a Call On Hold Putting a Call On Hold Putting a Call On Call Park Handling a Second Call Digital Doorphone Operation gital Telephones - Advanced Features Caller ID, ANI, DNIS Information Storage Absence Message Display	47 47 48 48 49 50 50 50 51 52 53 53 53 54 55 55
	Making an Outgoing Call Receiving an Incoming Call Making an Intercom Call Receiving an Intercom Call Making an E-Response Help Call Transferring a Call to Another Extension Putting a Call On Hold Picking Up a Call On Hold Picking Up a Call On Hold Putting a Call On Call Park Handling a Second Call Digital Doorphone Operation gital Telephones - Advanced Features Caller ID, ANI, DNIS Information Storage Absence Message Display Account Code Alphanumeric Display	47 47 48 48 49 50 50 50 51 52 53 53 53 53 55 55 56
	Making an Outgoing Call Receiving an Incoming Call Making an Intercom Call Receiving an Intercom Call Making an E-Response Help Call Transferring a Call to Another Extension Putting a Call On Hold Picking Up a Call On Hold Putting a Call On Call Park Handling a Second Call Digital Doorphone Operation gital Telephones - Advanced Features Caller ID, ANI, DNIS Information Storage Absence Message Display Account Code Alphanumeric Display Alternate Tone/Pulse Dialing	47 47 48 48 49 50 50 51 52 53 53 53 53 55 55 55 57
	Making an Outgoing Call Receiving an Incoming Call Making an Intercom Call Receiving an Intercom Call Making an E-Response Help Call Transferring a Call to Another Extension Putting a Call On Hold Picking Up a Call On Hold Picking Up a Call On Hold Putting a Call On Call Park Handling a Second Call Digital Doorphone Operation gital Telephones - Advanced Features Caller ID, ANI, DNIS Information Storage Absence Message Display Account Code Alphanumeric Display	47 47 48 48 49 50 50 51 52 53 53 54 55 55 56 57 57

Automatic Repeat Dialing	58
Background Music	59
Barge-In	59
Built-In Speakerphone	
Busy Bypass/Autodial Unit	
Busy Bypass Tone Calling	
Busy Bypass Voice Calling	61
Busy Intercom Callback	
Busy Number Callback	
Busy Outside Line Queuing	
Busy Overriding	
Call Coverage	
Call Forwarding	67
Call Monitoring	68
Call Park/Swap	
Call Pick-Up	
Direct Call Pick-Up	
Internal Group Call Pick-Up	
External Group Call Pick-Up	
Caller ID Display Change	
Camp-On	
Clear Call	72
Conference	
Consultation Hold	
Conversation Recording	
Delayed Ringing	75
Direct Outside Line Appearance	
Direct Station Selection/Busy Lamp Field	
Distinctive Ringing - Outside Line Calls	
Distinctive Ringing - ICM/Outside Line	
Do Not Disturb (DND)	
Exclusive Hold	
Executive Override	
Extension Number Display	
Feature Button Display	
Flash	
Floating Outside Line Group Access	
Forced/Verified Account Code	
Full/Half Duplex Speakerphone Mode Switching	
Group Monitoring	
Group Park	
Hands-Free Answerback On Intercom	
Headset Button	80

Headset Control Key	80
Headset Connection	82
Hot Line	82
Howler Tone	83
Last Number Redial	83
Master Hunt Groups	83
Memo Dial	
Message Waiting	85
Microphone Cut-Off	
Monitor Improvements	
Off-Hook Outgoing Call	
Off-Hook Outside Line Answering	
Off-Hook Outside Line Queuing	
On-Hook Dialing	
Outside Line Call Restriction	
Outside Line Pick-Up Restriction	
Paging	
Personal Ringing Tone	
Preset Dial/Backspace Dialing	
Prime Line Access	
Privacy/Privacy Release	
Private Line	
Protected Station	
Quick Mode Operation	
Remote Relay Control	
Ring Muting	
Save Number Redial	
Shift Call	
Speed Dial	
Station Coaching	
Station External Ringer Connection	
Station Restriction Password	
Text Messaging	
Time Reminder	
Tone/Voice Calling	
Transfer Off Premise	
Transfer to Guest Mailbox	
Unanswered Incoming Outside Line Warning Tone	
Universal Night Answer	
Voice Mail Message	
Voice Mail Monitor (Answering Machine Emulation)	
Whisper Page	
Whisper Page During Consultation Hold	108

SECTION 4 - ATTENDANT POSITION FEATURES	111
Attendant Position - Basic Features	113
Receiving an Incoming Call	113
Transferring a Call to Another Extension	
Transferring a Second Call to an Extension	113
Receiving an Intercom Call	
Putting a Call on Hold	114
Picking Up a Call on Hold	
Putting a Call on Call Park	114
Answering a Call that Returns to the Attendant Position	
Making an Outgoing Call	115
Making an Intercom Call	
Making an E-Response Help Call	
Making a Page Announcement	116
Attendant Position - Advanced Features	117
911 Call Indication	117
Caller ID, ANI, DNIS Storage - Delete All	
Alarm Clear	
Attendant Automatic Hold	
Attendant Override	
Automatic Answer Mode	
Clock Set/Adjustment	
Direct Station Selection	
Incoming Call Termination	
Flexible Call Forward (Internal/ External)	
Night Mode	
Operator Priority	
Overflow Transfer	
System Speed Dial Registration	
System Text Message Registration	123
SECTION 5 - SINGLE-LINE TELEPHONE USER'S GUIDE	125
Single-Line Telephone - Basic Features	127
Making an Outgoing Call	
Receiving an Incoming Call	
Making an Intercom Call	
Receiving an Intercom Call	
Making an E-Response Help Call	
Transferring a Call to Another Extension	128
Putting a Call on Hold	129
Picking Up a Call on Hold	129
Putting a Call on Call Park	
Handling a Second Call	131

Single-Line Telephones - Advanced Features	132
Account Code	132
Busy Intercom Callback	132
Busy Number Callback	133
Busy Outside Line Queuing	134
Call Forwarding	135
Call Park/Swap	137
Call Pick-Up	138
Camp-On	139
Clear Call	139
Conference	
Consultation Hold	
Do Not Disturb	
Flash	
Floating Outside Line Group Access	
Flexible Call Forward	
Forced/Verified Account Code	
Group Park	
Hot Line	
Howler Tone	
Last Number Redial	
Master Hunt Groups	
Message Waiting	
Off-Hook Outgoing Call	
Off-Hook Outside Line Queuing	
Paging	
Pre-Ringing	
Private Line	
Protected Extension	
Shift Call	
Single Line Message Waiting Stutter Dial Tone	
Speed Dial	
Station Restriction Password	
Tone/Voice Calling	
Unanswered Incoming Outside Line Warning Tone	
Universal Night Answer	150
SECTION 6 - OMEGA-VOICE VMI USER'S GUIDE	151
Omega-Voice VMI Basic Features	153
Mailbox Access	
Transfer to Voice Mail	154
Forward to Voice Mail	154
Mailbox Tutorial	

Main User Menu	155
Message Folder Menu	155
Make a Message for Another User	155
User Options Menu - Mailbox Setup	
Mailbox Name	156
Mailbox Greeting Management	157
Mailbox Pass Code	157
Distribution List Menu	157
Blocking and Forwarding Menu	159
Time/Date Feature	
Message Replay Order	

Section 1 – ADIX-VS General Description

FCC Registration and Requirements

INSTRUCTIONS TO USER

CONGRATULATIONS You selected a telephone system manufactured by Iwatsu Electric Co., Ltd. that was designed to provide a multitude of features with the reliability for which Iwatsu products are famous. The Omega-Phone ADIX-VS Telephone System is registered and approved by the Federal Communications Commission (FCC) for direct connection to your local telephone service. In accordance with FCC rules and regulations regarding telephone equipment, Iwatsu is required to make you aware of your rights and obligations regarding the use of this equipmentSo we may fulfill our obligations, please take a moment to carefully read the rules and regulations contained herein that apply to you.

FCC RULES AND REGULATIONS

(1) Notification to the Local Telephone Company

The local Telephone Company may request specific information about the Omega-Phone ADIX-VS Telephone System before connection can be made to the local Telephone Company lines. When requested by the Telephone Company, the following information should be provided:

- (a) The FCC Registration Number for all equipment connected to an individual line.
- (b) The largest Ringer Equivalence Number (REN) for each line.
- (c) Information required for compatible operation of the equipment with the Telephone Company communication facilities.

The FCC Registration Number and Ringer Equivalence Number (REN) are printed on the equipment label located on the common equipment cabinet of the system. The largest Ringer Equivalence Number is the sum of the Ringer Equivalence Number (REN) of each FCC registered device that is connected to the same line. The maximum Ringer Equivalence Number that can normally be used without causing faulty operation is 5.0. Check with your local Telephone Company to determine the maximum Ringer Equivalence Number for the telephone lines you are using. In order to connect registered terminal equipment to the Telephone Company lines, the terminal equipment must utilize a FCC "standard means of connection," often referred to as a "registered jack." The type of jack utilized on the Omega-Phone ADIX-VS telephone system is identified by a USOC code

number. Different code numbers are utilized for the various types of services provided by the Telephone Company that the systems use. When requesting new telephone service, the Telephone Company must be informed of the code number for each type of service. The ADIX-VS system can be configured as either a Key Telephone System - Fully Protected, or a Multi-Function (Hybrid)

System - Fully Protected. The following are the codes and registration numbers applicable to the Omega-Phone ADIX-VS equipment:

ADIX-VS FCC Registration Numbers		
Key Telephone System - Fully Protected	BD620Q-60444-KF-E	
Multi-Function (Hybrid) System	BD6MLA-21244-MF-E	

The following constitutes the other information required to be reported to the local Telephone Company when requesting service:

CALLER ID / LOOP START	runk
Ringer Equivalence No	.0.5B
Service Order Code	.9.0F
Facility Interface Code	.02LS2
Registered Connection	.RJ21X

ISDN BRI TRUNK

Service Order Code	6.0
Facility Interface Codes	02IS5
Registered Connection	RJ49C *

NOTE: * — NT1 required.

(2) Restrictions on the Use of Registered Telephone Equipment

FCC rules governing customer owned telephone equipment specifically exclude the use of the Omega-Phone ADIX-VS system on public coin telephone (payphone) lines. The connection to party line service is subject to local state tariffs. Contact your state public utility, public service commission, or corporate commission for more information.

(3) Incidence of Harm

If for some reason the Omega-Phone ADIX-VS system causes harm to the Telephone Company network, the Telephone Company will notify you in advance that temporary discontinuance of service may be required. In the event advance notice is not practical, the Telephone Company will notify you of the interruption of service as soon as possible. Also, the Telephone Company will advise you of your right to file a complaint with the FCC if you believe it is necessary. The Telephone Company may also make changes in its facilities, operations, or procedures that could affect the operation of your system. If this occurs, the Telephone Company will provide advance notice in order for you to make the necessary modifications to maintain uninterrupted service.

(4) Hearing-Aid Compatibility

The Omega-Phone ADIX-VS telephone system, utilizing telephone station equipment manufactured by Iwatsu, meets all FCC requirements for Hearing-Aid compatibility.

(5) Instruction Regarding the Repair and Refurbishment of Registered Equipment

Only the manufacturer or its authorized agents are permitted under the FCC rules to make other than routine repairs to registered telephone equipment. Repairs made to registered telephone equipment by unauthorized entities will void equipment warranties as well as violate local state tariffs. Routine repairs are classified typically as lamp replacement, fuse replacement, directory label replacement, etc. All other repairs to your Omega-Phone ADIX-VS telephone equipment should be performed by Iwatsu America, Inc. When trouble is experienced on any telephone line that your system is connected to and the trouble is causing harm to the network, the Telephone Company may request that you remove the equipment from the telephone line(s) until the problem has been corrected. To contact Iwatsu America, Inc. for information regarding the repair of your equipment, write or call:

(201) 935-8580 IWATSU AMERICA, Inc. 70 Moonachie Avenue Moonachie, NJ 07074 Attn: Repair Department

(6) Use of Other FCC Registered Equipment

Aside from the Ringer Equivalence reporting as explained (above), use of other FCC equipment may provide for specific limitations depending upon the type of equipment. Check the instructions included with such equipment to determine what the limitations are, if any, on the use of such equipment.

(7) Automatic Dialers

The Omega-Phone ADIX-VS system contain features that provide for the automatic dialing of outgoing calls. When programming Emergency Numbers and (or) making test calls to Emergency Numbers:

- (a) Remain on the line and briefly explain to the dispatcher the reason for the call.
- (b) Perform such activities in the off-peak hours such as early morning or late evening.

(8) Toll Restriction and Optimized Routing Features

The Omega-Phone ADIX-VS system provides both Toll Restriction and Optimized Routing features that may be programmed in your system. The software or programming contained in the ADIX-VS system may be required to be upgraded to allow user access to the network in order to recognize newly established network area codes and exchange codes as they are placed in service. Failure to upgrade the programming or software (if required) to recognize the new codes as they are established will restrict the user from gaining access to the network and to these codes. Bell Communication Research (Bellcore) publishes North American Numbering Plan (NANP) information in paper, microfiche and tape. An abbreviated summary of the newly established area codes and exchange codes is also available. Bellcore may be contacted at (973) 829-2000 or on the Internet at www.bellcore.com to obtain the appropriate information for keeping current with changes in the NANP.

(9) Radio Frequency Emissions

The Omega-Phone ADIX-VS Telephone System is registered with the FCC as a Class A RF Device that may radiate radio frequency emissions. In the event that the system causes interference with another device, steps must be taken to reduce the interference, including possible removal of the equipment. While the probability of such an event is low, consult Iwatsu America, Inc. for further assistance if this occurs.

(10) Equal Access Requirements

This system is capable of providing users access to interstate providers of operator services through the use of equal access codes. Failure to provide equal access capabilities is a violation of the Telephone Operator Consumer Services Improvement Act of 1990 and Part 68 of the FCC rules.

(11) Electrical Safety Advisory

While this system is fully compliant with FCC Rules and Regulations, it is recommended that an AC surge arrestor of the form and capacity suitable for the model of system purchased be installed in the AC outlet to which the system is connected. Consult with your distributor as to the surge protector requirements for your system.

(12) Music-On-Hold

In accordance with U.S. Copyright Law, a license may be required from the American Society of Composers, Authors and Publisher, or other similar organization, if radio or TV broadcasts are transmitted through the music-on-hold feature of the telecommunication system. Iwatsu America, Inc., hereby disclaims any liability arising out of the failure to obtain such a license.

(13) Use of Call Recorder and VM Record

In certain states it is illegal to intercept and/or record telephone calls. In certain states and under certain circumstances it is illegal to intercept for the purposes of listening in and/or recording telephone calls. Because such activity is not illegal in all jurisdictions and may be permitted in training and/or monitoring of personnel, this telephone system can be programmed to permit interception and/or recording with or without warning to those on the line. Before utilizing the system for such purposes, you are advised to consult with an attorney familiar with laws of the jurisdiction in which you utilize such feature. Iwatsu America, Inc., its distributors, and the manufacturers responsible for this feature make no representations with respect to the legality of its use and disclaim any liability for claims and/or damages arising from the use or misuse of this feature.

(14) Emergency 911

ADIX-VS can be configured to use assigned telephone numbers (Caller ID or ANI) for defined areas based on the proposed "40,000 sq. ft. rule." This "Area Routing" feature provides the 911 Public Service Answering Point (operator) information that identifies the general location of the caller.

IWATSU AMERICA, INC.

ADIX-VS System Components Overview

Components

VS-KSU Control Module

8 Card Slots Dimensions (HxWxD): 13.8"x16.5"x5.9" Weight: Approximately 14.5 lbs. fully loaded

VS-PWSU Power Supply

Dimensions (HxWxD): 2.5"x4.7"x8.3" Weight: 4 lbs.

Switch Parameters

Time Division Multiplexed PCM32 Mu-law Speech Compression Time Slots: 114 Stored Program Distributed Multi-microprocessor

System Memory

Component	Flash Memory
VS-CPUMEM	4 MB

Heat Dissipation

VS-PWSU (maximum): 162 BTU/hr

Environment

Operating Temperature: 0° to 40°C/32° to 104°F Storage Temperature: -10° to 50°C/14° to 122°F Relative Humidity (noncondensing): 10% to 90% Power <u>Nominal</u> VS-PWSU Input: <u>Nominal</u> 167 watts

AC Input

RAM 2 MB

AC Input Voltage Tolerance: VS-PWSU: 108V-132V @ 120V Frequency Tolerance: VS-PWSU: 47 Hz -63 Hz Maximum Input Current VS-PWSU: 2.0 A

Maximum

240 watts

ADIX-VS General Description - 8



ADIX-VS Cabinet (VS-KSU)

Ringing Generator

Frequency:	20 Hz
Amplitude:	90 VAC
Maximum Simul	taneous Ringing
(SLT):	2

Battery Backup

The ADIX-VS (VS-PWSU) power supply includes a battery interface. Backup time is dependent upon battery array, system size and system usage.

FCC Registration Number

KF: BD6MLA-21247-KF-E MF: BD6MLA-21244-MF-E

Facility Interface Codes

Caller ID Trunks:	02LS2
ISDN BRI:	02IS5

Attendant Position

Maximum Attendant Positions:1

Telephone Requirements

Digital Telephones Wiring: 1 pair Total End-to-end Distance 22 AWG Twisted Pair: 1,000 ft. 24 AWG Twisted Pair:1,000 ft. 1 Star Repeater: 1,500 ft. 2 Star Repeaters: 8,000 ft. Single Line Telephones Wiring: 1 pair Wiring w/Message Lamp: 1 or 2 pair Maximum Loop Resistance On-premise SLT: 600 ohm **Ringing Frequency:** 20 Hz

Circuits Per Card Digital Station Card (VS-4PSUB): 4 circuits Analog Station Ports (standard): 2 circuits Omega-Voice VMI (VS-VML): 4 circuits Caller ID Trunk Card (VS-2CITK): 2 circuits ISDN BRI Trunk Card (VS-ICOTB): 1 circuit (2B + 1D)Miscellaneous Function Card (VS-MISC): 5 circuits Software 10 Outgoing Trunk Groups: Incoming Trunk Groups: 10 Incoming Call Ringing Assignment: 16 Stations/Line. Incoming Call Delayed Ringing Assignment: 16 Stations/Line Doorphone Ringing Assignment: 16 Stations/Doorphones Call Pick-up Groups: 10 CO/ICM Hunt Groups: 10 Maximum Stations per Hunt Group: 16 Paging Groups Internal: 8 Maximum Stations per Paging Group: 16 External Paging Zones: 2 Station Speed Dial: 10 System Speed Dial: 90 Maximum Digits per Speed Dial Number: 32 Speed Dial Alphanumeric ID: 10 characters CO/Station Alphanumeric ID: 8 characters

Account Codes:	12 digits	Station Text Messages: 10
Forced Verified Accou	0	System Tex80Messages: 90
Park Orbits		Text Message Groups: 10
Attendant/System:	10	Maximum Stations per Text
Station:	1	Message Group: 16
Call Forwarding:		Station Flexible Key Patterns:13
No Answer:	no limit	Caller ID/ANI/DNIS Tables:100
Station Numbering Pla	n:flexible	Caller ID Storage: 50 calls

ADIX-VS Hardware Capacities

SYSTEM	ADIX-VS
Power Supply	VS-PWSU
Card Slots	8
Number of Ports ²	45
Trunk Ports ³	6
Station Ports	16
Digital Station Ports	14
Voice Mail Ports	4
Attendant Positions	1
On-premise SLTs	2
Doorphones	14
Busy Bypass Units ⁴	7
Caller ID Trunks	6
Loop Start Trunks	6
Conference Circuits	2
ISDN BRI Cards ³	3
Miscellaneous Function Ports	5
Serial Ports	2

- 1. This table lists the maximum quantity supported for each component type. The combined total number of ports for each system is limited to the "Number of Ports" category of this table. The capacities listed are based on the total number of card slots available, software restrictions and the power consumption of each component.
- 2. The combined number of Station, Trunk, and Miscellaneous ports may not exceed the number of ports listed in this category.
- 3. The total number of trunks programmed may not exceed 6 Caller ID/Loop Start Trunks or 3 ISDN BRI Lines.
- 4. When Busy Bypass Units are used, the total number of Digital Stations may not exceed these numbers.

Key Telephone Lamp Indications

Lamp	Indication
Lamp	mulcation

<u>Status</u>	Lamp Indication
I-Use (Green)	. Modulation Steady (On)
CO Incoming/Call Forward	. 0.1 sec. on, 0.9 sec. off
I-Hold (Green)	. 0.5 sec. on, 0.5 sec. modulated on
System Hold/Non-Privacy	. 0.1 sec. off, 0.3 sec. modulated on
Recall, ICM Incoming, MSG	. 0.7 sec. off, 0.3 sec. modulated on
DND	. 0.5 sec. on, 0.5 sec. modulated on
Busy	. Steady (On)

Station Port Requirements

Model	Description	Ports Required
IX-12KTS-3	. 12 line keys (24 line keys with IX-12E	LK-3)1
IX-12KTD-3	. 12 line keys (24 line keys with IX-12E	LK-3)1
IX-12KTS-2	. 12 line keys (24 line keys with IX-12E	LK) 1
IX-12KTD-2	. 12 line keys (24 line keys with IX-12E	LK) 1
IX-VT	. Versa-Phone	
IX-MKT	. Digital Key Telephone	
DCKT970	. Digital Wireless Telephone	
		or shared with
	di	gital telephone
IX-DCKT900	. Digital Wireless Telephone	
		or shared with
	di	gital telephone
IX-DDPH	. Digital Doorphone	
IX-BPAD	. Busy Bypass Unit for IX-12KTx-2	1

Time Parameters

Hold Recall Timer	0 - 255 seconds
Timed Trunk Queuing	1 - 20 minutes
Doorphone Answer Time	5 - 255 seconds
Hunting Time	0 - 255 seconds
Night Mode Start Time	00:00 - 23:59
Auto CO Answer Start Time	00:00 - 23:59
MISC Relay Timer	10 - 255 ms

System Numbering Plan

ADIX-VS has a Flexible numbering plan. Default numbering is three digits. Station length can be changed to two, three, or four digits in length.

ADIX-VS Digital Telephones

There are seven types of Digital Key Telephones designed to work with ADIX-VS. Each of these telephones is described in this section.

IX-12KTS-3 Digital Key Telephone

The IX-12KTS-3 Digital Key Telephone has 4 Fixed Feature Keys with a red LED, 8 Programmable Multi-Purpose Keys with a red LED, 12 Programmable Multipurpose Keys each with a red LED and a green LED, a mute key, a ringer volume control key, a handset volume control key, a speaker volume control and a full-duplex speakerphone. The IX-12KTS-3 Digital Key Telephone has an incoming call/message waiting indicator lamp that flashes red for incoming calls and green for a programmable feature such as message waiting. The IX-12KTS-3 may be enhanced by adding the IX-12ELK-3 which adds 12 programmable multi-purpose keys. This model is available in black or white.



IX-12KTS-3 black and white

IX-12KTS-3 Digital Key Display Telephone

The IX-12KTD-3 Digital Key Display Telephone offers all the functionality of the IX-12KTS-3 with the addition of a 2-line, 16 characters per line liquid crystal display. This display is very helpful for using advanced features and for providing status information. The IX-12KTD-3 Digital Key Telephone has an incoming call/message waiting indicator lamp that flashes red for incoming calls and green for a programmable feature such as message waiting. This model is available in black, or white.



IX-12KTD-3 with IX-12ELK-3, black and white

IX-12KTS-2 Digital Multiline Telephones (Discontinued)

The IX-12KTS-2 Digital Multiline Telephone has four fixed feature keys, eight feature keys with red LED's and an additional 12 multipurpose keys for feature operation or outside line appearances. Twelve multipurpose keys may be added with the addition of an IX-12ELK key expansion module.



IX-12KTS-2, gray and ash

ADIX-VS General Description - 13

IX-12KTD-2 Digital Multiline Telephones

The IX-12KTD-2 Digital Multiline Display Telephone offers all the functionality of the IX-12KTS-2 with the addition of a 2-line, 16 characters per line liquid crystal display and an incoming call indicator lamp. This display is very helpful for using advanced features and for providing status information. The oversized indicator lamp flashes red for incoming calls and green for a programmable feature such as message waiting.



IX-12KTD-2 with IX-12ELK, black (not shown), gray (discontinued) and ash (discontinued)

IX-MKT Digital Key Telephone

The IX-MKT Digital Key telephone is equipped with 4 Fixed Feature Keys with a red LED and 8 Programmable Multipurpose Keys with a red/green LED, and an incoming call indicator lamp that flashes red for incoming calls and green for a programmable feature such as message waiting. The IX-MKT may be upgraded with an optional internal speakerphone unit. In addition, the IX-MKT also supports a single line/modem connection (for outgoing calls only) through an in-board modular connector. This feature allows simultaneous use of a modem while on a voice call. This model is available in black or white.



IX-MKT, black and white

DCKT970 Digital Wireless Key Telephone

The DCKT970 Digital Wireless Key Telephone has four feature keys (Transfer, Hold, Feature, Channel and Redial) and four function (F1-F4) keys. It may be connected directly to a digital station port, or it may share a port with a digital telephone. All of the keys on this telephone are programmable with the exception of the Talk, Channel and Redial keys which are fixed. The transmission frequency of the DCKT970 is between 902 and 928 Mhz.

For operation instructions on the DCKT970 Digital Wireless Key Telephone please refer to the *DCKT970 Digital Wireless Key Telephone Owner's Manual* (Part Number 109530).



DCKT970

IX-DCKT900 Digital Wireless Key Telephone (Discontinued)

The IX-DCKT900 Digital Wireless Key Telephone has four feature keys (Transfer, Hold, Feature, and Memo) and four function (F1-F4) keys. It may be connected directly to a digital station port, or it may share a port with a digital telephone. All of the keys on this telephone are programmable with the exception of the MEMO key which is fixed. The transmission frequency of the IX-DCKT900 is between 902 and 928 MHz.



IX-DCKT900

Digital Doorphones

The Digital Doorphone (IX-DDPH) provides an economical and simple method to allow visitors to make an intercom call to gain entrance to your building.

Single Line Telephones

ADIX-VS will support two industry-standard 500 or 2500 type single line telephones.





ADIX Digital Telephone Key Layout

Multipurpose Keys - Can be programmed for a specific function, such as outside lines, individual extensions, or one-touch feature operation.

Button Lamps - Light up or flash when someone is using a line or a feature corresponding to that button.

Green Lamp - Means that you are using that line. **Red Lamp** - Means that someone else is using that line.

SPKR (Speaker) - Without lifting the receiver, the Speaker button allows you to dial and receive outside or internal calls, as well as converse, for "hands-free operation."

TRAN (Transfer) - Allows you to transfer a call from your telephone to another extension.

FEAT (Feature) - The feature button is used to help operate certain special and advanced features available through ADIX-VS.

HOLD/DND (Hold/Do Not Disturb) - This button is used to put a call on Hold, to set the Do Not Disturb function to prevent any calls from getting through or ringing at your extension or to transfer the call to the number set in your Fixed Call Forward Destination.

Speaker Volume Control Button – The Speaker Volume Control is a rocker switch with sixteen settings. To increase the speaker volume, press the + side of the key; to decrease the volume of the speaker, press the - side of the key. The Speaker Volume Control now controls only the speaker volume, you can select the desired volume through this variable control.

Ringer Volume Control - There are 4 volume levels to chose from. When a new volume level is chosen, a tone sounds at the selected volume level: one beep sounds for the lowest volume setting, four beeps sound at the highest. This key also controls the volume of the BGM (Background Music) played on the telephone.

Handset Volume Control - The handset volume control buttons allow you to adjust the handset volume and headset volume to one of three levels.

Mute - When you are using the Speakerphone, Hands-Free Answerback or the handset/headset, the Mute button prevents any voice or sounds to be heard by the person on the other end of your call. When you press the Mute button to turn off the microphone, the Mute button will stay lit. Pressing the Mute button again permits the other person to hear your voice again.

Many ADIX-VS features can be operated either by dialing a feature operation code or using a one-touch feature button, if your telephone has one assigned for that specific feature. The feature code numbers listed in this manual are preset in the ADIX-VS system. Your system installer may assign a different code number for any feature based on individual system requirements.

Optional Station Equipment

The following components provide the ADIX-VS station terminals with additional features.

IX-COMLINK-2

IX-COMLINK-2 is a TAPI-compliant Computer Telephony Interface adapter that bridges the gap between your PC and ADIX-VS digital desktop telephone. IX-COMLINK-2 combines desktop application software such as Iwatsu's Contact Point application and a digital telephone system to fully harness the power of your PC through your ADIX-VS telephone system.

IX-KTLCD-3 Display Unit (IX-12KTD / S-3 only)

IX-KTLCD-3 units are avail-able in both black and white to match the IX-12KTD / S-3 Digital Key Telephones. The IX-12KTS-3 Digital Key Telephones are field upgrade-able to receive the new IX-KTLCD-3 unit.

IX-12ELK-3 (IX-12KTD / S-3 only)

The IX-12ELK-3 Expansion Line Key units add an additional 12 keys to your IX-12KTD / S-3 Digital Key Telephones and are available in both black and white to match the IX-12KTD-3 and IX-12KTS-3 Digital Key Telephones. The buttons on the black telephone are black, and the buttons on the white phone are gray. The IX-12KTD / S-3 Digital Key Telephones are field upgradeable to receive the new IX-12ELK-3.

IX-LRAU (IX-12KTD / S-3 only)

The IX-LRAU Internal Loud Ringer Unit provides the interface for IX-12KTD-3 or IX-12KTS-3 Digital Key Telephone to a station loud-ringer, external speakerphone unit and a recording device. The IX-LRAU works the same as the IX-LRSP but provides a new interface to a recording device through a 1 / 8 inch mini-jack audio connector.

IX-12ELK Key Telephone Expansion Module

The IX-12ELK Key Telephone Expansion Module adds 12 multi-purpose keys with red and green LEDs to IX-12KTD-2 and IX-12KTS-2 Digital Multiline Telephones.

IX-SNHD Station Noise Canceling Handset

Hearing aid compatible Station Noise Canceling Handset. Provides comfortable conversation in noisy areas for the ADIX-VS telephones.

IX-SHHD Station Amplified Handset

Station Amplified Handset. Provides acoustic receiving voice amplification for hearing impaired people.

IX-BPCU (IX-12KTD / S-3 only)

The IX-BPCU Busy Bypass unit allows a caller that calls a busy station with the IX-BPCU unit installed to make a voice announcement to that busy station. Unlike ADIX digital key telephones prior to the IX-12KTD / S-3, the IX-12KTD-3 and IX-12KTS-3 Digital Key Telephones do not use an additional speaker and MIC for the busy bypass function. The IX-BPCU unit utilizes the speaker and the microphone of the IX-12KTD-3 or IX-12KTS-3 Digital Key Telephone. The IX-BPCU requires and additional digital station port to operate.

IX-LRSP Station Loud-Ringer/ External Speakerphone Adapter

Station Loud-ringer/ External Speakerphone Adapter.

IX-AUTD Auto-Dialer Unit

Station Auto-Dialer Unit. Adds 16 programmable keys that can be used as auto-dialers.

IX-BPAD Busy Bypass/Auto-Dialer Unit

Station Busy Bypass/Auto-dialer Unit. Adds the busy bypass calling feature to multiline telephones, plus 16 programmable keys that can be used as auto-dialers. It requires one station port.

IX-STPD Station Pedestal

Station Pedestal/Wall Mount. Used to wall mount or to provide additional angle to the ADIX-VS Digital Multi-line Telephones.

IX-VTPD IX-MKT / Versa-Phone Pedestal

IX-MKT/Versa-Phone Pedestal/Wall Mount. Used to wall mount or to provide additional angle to the ADIX-VS Versa-Phones.

IX-ADPD Autodial Pedestal

Autodial Pedestal/Wall Mount. Used to wall mount or to provide additional angle to the Autodial Unit.

IX-SREP Star Repeater

Used to extend the distance an ADIX-VS Digital Telephone or Digital Doorphone may be from the VS-KSU (Key Service Unit). An IX-SRWPS is required for local power.

Component Description

VS-PWSU Power Supply Description

The VS-PWSU power supply provides the required power for the ADIX-VS. One VS-PWSU is required in each ADIX-VS.

Battery Back-Up

The VS-PWSU power supply may be equipped with optional connecting cable for connection with a backup battery array. Backup time is dependent upon battery array, system size and usage.

VS-MAIN Motherboard Interface Card

The VS-MAIN motherboard has connectors to support six Digital Stations, two Analog Stations, one External MOH Source, and two Serial Ports. In addition it has connectors for the VS-CPUMEM CPU Card, three VS-ICOTB ISDN BRI cards or VS-2CITK Caller ID Trunk Cards, two VS-4PSUB Digital Station Cards, one VS-VML Voice Mail Card, and one VS-MISC Miscellaneous Function Card.

VS-CPUMEM Common Control Card

The VS-CPUMEM common control card is the fundamental component for system operation. This card is installed in a dedicated VS-MAIN card slot and contains the Central Processing Unit (CPU), ADIX-VS Operating System and Highway Controller.

The VS-CPUMEM Controller Card is the standard processor for the ADIX-VS system. It controls all ADIX-VS system functions with a 32-bit processor. The VS-CPUMEM Controller Card performs highway controller functions, and synchronizes digital trunk clock timing and system highway timing.

Memory. The VS-CPUMEM card contains 2 megabytes of RAM and 4 MB of flash memory to store the user database. To retain the stored contents of the RAM without the system power supply, nickel-cadmium batteries are provided with the VS-CPUMEM card.

Highway Controller. The VS-CPUMEM has one two-way highway consisting of thirty-two PCM time division multiplexed data channels. This two-way highway channel provides voice and data communication through the system ports. A 16 MHz microprocessor controls the PCM highways with the aid of a slave processor that directly communicates with the CPU.

ADIX-VS Operating System. The VS-CPUMEM contains the 68EC020/25 MHz Central Processing Unit (CPU) and also 4MB of Intel ® flash memory that stores the ADIX-VS operating system.

System Port Interface Cards

ADIX-VS supports 6 digital stations and 2 single-line/analog stations in standard configuration. System Port Interface Cards may be installed to add digital stations, lines, voice mail, and miscellaneous function capability. Five System Port Interface Cards are available.

VS-4PSUB Digital Station Interface Card

A VS-4PSUB card provides four station terminal ports for digital key telephones that are connected through star wiring. Each port connects the station terminal with a two-wire cable that carries bi-directional data transmission (ping-pong transmission).

Ports: 4 ports/card. Stations: 1 port required for IX-12KTD/S-x, IX-12KTD/S-x + IX-12ELK-x, IX-MKT, IX-VTA, IX-DDPH, DCKT970, IX-DCKT900, IX-BPAD

VS-VML Omega-Voice VMI Card

The Omega-Voice VMI VS-VML card is standard on ADIX-VS. It provides four voice mail/auto attendant ports. It supports 50 voice mail boxes, 4 system mailboxes/automated attendant menus and 8 hours of message storage capacity.

Ports: 4 ports/card. Capacity: 8 hours message storage, 50 voice mailboxes, 4 system mailboxes/menus.

VS-2CITK Caller ID Trunk Interface Card

A VS-2CITK card interfaces the ADIX-VS to two Caller ID Loop Start circuits. This card is required to use the Caller ID feature.

Ports: 2 ports/card Additional Power: None Features: 600/900 Ohm impedance selection, Long/Short distance selection

VS-ICOTB ISDN BRI Line Interface Card

The VS-ICOTB card interfaces the ADIX-VS to one ISDN BRI (Basic Rate Interface) line. Each ISND BRI line contains two B (Bearer) channels for voice and data transmission and one D channel for signaling.

Interface: 3 channels/card (1 PRI line with 2 B channels + 1 D channel) Features: ISDN Basic Rate Interface

VS-MISC Miscellaneous Function Card

The VS-MISC Miscellaneous Function Card converts the system ports for input/output functions. These functions include an external Background Music Source (BGM), Paging Applications, Remote Control Relays and Sensor Inputs.

Ports: 5 ports Functions: BGM input, output to paging amplifier, two paging zone control, two programmable relays or sensor inputs.
IX-IPSEGWAY Serial to Ethernet Gateway

The IX-IP SEGWAY Serial-to-Ethernet Gateway is an external device that connects the ADIX-VS telephone system and VS-VML Voice Mail Card to a local area network (LAN) Ethernet connection for programming access. Through the common Transfer Control Protocol / Internet Protocol (TCP / IP) networking, system administrators can program the ADIX-VS and Omega-Voice VMI (VS-VML) voice mail system through a LAN or WAN connection using the ADIX Programmer or the Omega-Voice VMI System Editor.

Additionally, using the ADIX User Programmer, ADIX station users can now make station class of service changes to their Omega-Phone from their PC.

ADIX-VS General Description - 28

Section 2 -ADIX-VS System Features



This section explains some of the major system features in your ADIX-VS system.

All Ring Hunt Group

All Ring Hunt Group ring all the stations in the group simultaneously instead of call hopping from one hunt group to another after a predetermined time. This allows calls to a hunt group to be answered expeditiously.

Alphanumeric Speed Dial By Name

The Alphanumeric Speed Dial By Name feature allows users to access the speed dial list alphabetically. When a user wants to place a outside line outgoing call with the Speed Dial feature, the user can search the desired Speed Dial destination alphanumerically by name.

ANI Alphanumeric ID

ANI (Automatic Number Identification) numbers may be assigned a 16-character alphanumeric ID to identify the calling party, calling party's telephone number, type of call, or purpose of call. (Note: The telephone company often transmits ANI calls with both a number and a alphanumeric ID.) The ANI alphanumeric ID is displayed on the station LCD when a call is received on a ISDN BRI line with ANI service (requires VS-ICOTB card). A call can be routed to a station, master hunt group, or voice mailbox according to the ANI information received.

Automatic Number Identification (ANI) Trunks

ADIX-VS will support ANI trunks provided by the telephone company on ISDN BRI lines. The VS-ICOTB card is required for ANI operation.

Automatic Relay Control

With the Automatic Relay Control feature, the ADIX-VS system may be programmed to operate a one-shot relay at a fixed time each day.

ADIX-VS System Features - 31

Background Music

If your ADIX-VS system is connected to an external music source through the VS-MISC card, the music played may be heard through the speaker in any Iwatsu telephone connected to the system. This same music source may be played through an external paging system.

Caller ID Alphanumeric ID

Caller ID numbers may be assigned a 16-character alphanumeric ID to identify the calling party, calling party's telephone number, type of call, or purpose of call. (Note: Caller ID calls are often transmitted by the telephone company with both a number and a alphanumeric ID.) The Caller ID alphanumeric ID is displayed on the station LCD when a call is received on a Caller ID trunk (requires VS-2CITK card). A call can be routed to a station, master hunt group, or voice mailbox according to the Caller ID information received.

Caller ID / ANI / DNIS Number Storage

When a call is received on a caller ID (VS-2CITK) or ANI (VS-ICOTB) line, ADIX-VS will capture and store in the system memory information about the caller received with the call. This information includes the caller's telephone number and name, date and time of the call, trunk number, and destination station. This information can be output as a system event code or to SMDR. Information for the 50 most recent calls can be stored in the system memory on a first in, first out basis. Two modes of storage are available for this feature:

- Abandon Call Storage
- All Call Storage

Abandon Call Storage. When Abandoned Calls Only is selected as the storage mode for this feature, information will only be stored for the following types of calls:

- Caller hangs up or is disconnected before the call is answered.
- Caller hangs up or is disconnected while on hold or during hold recall.
- Caller hangs up or is disconnected during camp-on transfer or camp-on recall.

All Call Storage. When All Call is selected as the storage mode for this feature, the system will capture and store information about the caller received with the 50 most recent calls on caller ID (VS-2CITK) or ANI (VS-ICOTB) lines.

Call Forwarding

Fixed Call Forwarding

Allows your ADIX-VS installer to predefine call forwarding patterns for extensions. Fixed Call Forwarding does not activate the lamp on the Call Forward key and calls will always forward in the programmed sequence. Fixed Call Forwarding may be overridden by Call Forwarding entered at your telephone. All three forwarding modes may be programmed for Fixed Call Forwarding.

Flexible Call Forwarding

Allows the user to forward calls to an internal destination or an outside telephone number (using Personal Speed Dial numbers 90-99). The user can set separate call forward destinations for internal incoming and outside line incoming calls. For instance, you could set all intercom calls to go to your cell phone, and all outside line calls to be forwarded to your voice mailbox. The Flexible Call Forwarding feature also incorporates Follow Me capabilities.

Remote Call Forwarding

Allows you to direct outside line and/or intercom telephone line calls to forward to an external telephone number (using Personal Speed Dial numbers 90-99). Example forwarding locations include an answering service, a mobile phone, or a home telephone.

Caller ID Trunks

ADIX-VS will support Caller ID trunks provided by the telephone company. The VS-2CITK card is required for caller ID operation.

Conversation Recording

The Conversation Recording feature allows an ADIX-VS station user to record a station-to-station, outside line, or conference call to voice mail. This feature is available at any station that has been assigned a Conversation Recording **REC** key. For instructions on recording a conversation see Section 3.

ADIX-VS System Features - 33

Delayed Ringing

Allows outside lines ringing at a telephone to ring at another telephone or group of telephones after a predetermined period of time.

DNIS Alphanumeric ID

DNIS (Dialed Number Identification Service) numbers may be assigned a 16-character alphanumeric ID to identify the number the calling party dialed to reach the ADIX-VS. (Note: the Telephone Company often transmits DNIS calls with both a number and a alphanumeric ID.) The DNIS alphanumeric ID is displayed on the station LCD when a call is received on an ISDN BRI line with DNIS service (requires VS-ICOTB card). A call can be routed to a station, master hunt group, or voice mailbox according to the DNIS information received.

Dialed Number Identification Service (DNIS) Trunks

ADIX-VS will support DNIS trunks provided by the telephone company on ISDN BRI lines. The VS-ICOTB card is required for DNIS operation.

Direct Inward Line

Each outside line can be assigned to ring at up to 16 extensions. A different ringing assignment can be programmed for Day and Night modes. A ringing tone for each line can be selected from four available ringing tones. If a delayed ringing assignment is programmed for the line, the ringing changes to an incoming alarm when delayed ringing begins.

Direct Inward Line - Hunt Group

Outside lines can be programmed to ring at the stations assigned to a Hunt Group. The line will ring at the first available station in the hunting sequence. The same trunk can be assigned to ring at different hunt groups for day and night modes. If a station is busy or does not answer within the pre-set time, the call will ring at the next station in the hunting sequence.

Emergency 911 Service Using Area Routing

ADIX-VS may be programmed to provide 911 service using Area Routing. Area Routing can be used as an alternative method of routing 911 calls to provide a unique Caller ID/ANI number that represents the location of the caller in an office building.

E-Response Help Call Feature

ADIX-VS Software Version 1.30 includes the E-Response Help Call feature. With this feature, any system extension can simultaneously call a group of extensions. As part of this feature, stations may be configured with an emergency attribute. When these stations remain off-hook or pause while initiating an intercom call, a group call is automatically made to stations defined in an E-Response Group. Some specific applications of this feature are assisted living facilities, schools, medical facilities, or office buildings where a people might need help from attendants or co-workers.

Note: This feature is not to be used as a replacement for Emergency 911 services.

External Paging

ADIX-VS can be connected to an external paging system when the optional VS-MISC Miscellaneous Function Card is utilized. The ADIX-VS will support two external paging zones.

Flexible Ringing

Outside telephone lines directed to telephones may be assigned one of four tones to provide an audible identification of the type of call.

Flexible Station Numbering

ADIX-VS features a flexible numbering plan. At default, each station is assigned a three-digit extension number. Through system programming, system numbering may be changed to two, three, or four digits in length.

Group Monitoring

Key telephones and attendant stations can now be set to enable or disable group monitoring from the speaker. This feature allows a user not utilizing the group monitoring feature a smooth transition from handset to speakerphone.

Hunt Group Delayed Ringing

A Hunt Group may be programmed as the delayed ringing assignment for a trunk. If a call on an outside line is not answered at the ringing stations within a programmable duration, the call starts ringing to a hunt group. This feature makes it possible for you to send delayed calls to certain departments to voicemail or another department. For example, the Sales line can have a different delayed ringing destination than the Support line. If Sales is closed, calls might be forwarded to Support or to a Sales voice mailbox.

Internal Paging

When ADIX-VS is equipped with ADIX-VS digital key telephones, any telephone may make a page announcement that will be broadcast through the speaker of assigned telephones.

ISDN Calling/Called Party Number Coding

Iwatsu added a programmable option to code the setup messages for Calling Party Number and Called Party Number Information Elements. Recent changes in some areas now require customer provided equipment (CPE) to send information in setup messages. However, other areas cannot accept the new information. The new programming element accommodates both situations.

ISDN Lines

ADIX-VS will support ISDN BRI (Basic Rate Interface) lines when the optional VS-ICOTB card is utilized. A maximum of 3 VS-ICOTB cards may be installed in the system. Each VS-ICTOB card supports one ISDN BRI Line (2 B channels + 1 D channel).

ISDN BRI Caller Name ID

The ISDN BRI interfaces of the ADIX-VS can now receive Caller Name ID information from an incoming ISDN BRI trunk. The information displays on the LCD of the key telephone.

IX-MKT Key Assignment

A new key pattern (007 in *Class 14.01*) is included with version 1.30 software to accommodate the new IX-MKT telephone. The IX-MKT telephone is scheduled for release in the spring of 2000.

Loud Bell Interface

Outside telephone lines may be directed to ring a loud bell when ADIX-VS is equipped with the optional VS-MISC Miscellaneous Function Card. Each VS-MISC card will support two loud bells.

Master Hunt Group

ADIX-VS will support 10 master hunt groups. Each master hunt group can contain up to 16 extensions.

A hunt group is a group of telephones that is assigned a common access code. When this code is dialed, ADIX-VS will search for an idle telephone in that group. There are two ways that calls may search for an idle extension, Terminal and Distributed Hunting. In Terminal Hunting the incoming calls always start hunting from the first telephone in the group. In Distributed Hunting the incoming calls start hunting from the telephone following the last called telephone. In both cases, calls will hunt to the next telephone if a telephone does not answer in a predefined period of time, is busy, and in Call Forward, Absence Message or Do Not Disturb mode.

Monitor Improvements

Operation of the Monitor feature has changed so that it does not conflict with other features such as Whisper Page, Off-Hook Signal, Off-Hook Outside Line Ringing, etc. The original Monitor feature required you to call the station you wish to monitor first and then press the Monitor key. With this Version 1.3 enhancement, you now press the Monitor key and dial the extension you wish to monitor. This alleviates any conflicts with other features.

Music On Hold

If your ADIX-VS system is connected to an external music source through the VS-MAIN Motherboard, the music played may be heard by callers that have been placed on Hold or Call Park.

Optimized Routing

Optimized Routing is frequently referred to as either Least Cost Routing (LCR) or Automatic Route Selection (ARS). This feature allows ADIX-VS to automatically select the most inexpensive way to make an outgoing call. The system identifies the dialed number, then selects the most cost-effective outside line group. If a line in the first choice outside line group is not available the system may be programmed to select an alternate outside line group. The Optimized Routing package in ADIX-VS provides the following features:

- Eight routing plans
- Eight outside line group choices per routing plan
- Weekday, Saturday, Sunday, Holiday selection
- Three time periods per day
- Deletion and insertion of digits

Paging

ADIX-VS provides the following paging features:

All Call

Allows you to make an announcement either through the speakers in the Digital Telephones and/or an External Paging System.

Group Call (Internal)

Allows you to page through the speaker in a group of telephones. There may be 10 groups with a maximum of 16 extensions per group.

Zone (Two External Paging Zones)

Allows you to access individual groups of external paging speakers.

Meet-Me Page Answer

Allows you to answer a page from any telephone that is in the same Meet-Me Page Answer group.

Personal Ringing Tones

Station users may choose one of eight distinctive ringing tones to distinguish their station from others. The selected ringing tone is audible for all incoming CO calls, camp-on calls, (tone) intercom calls and during busy override.

Power Failure Memory Backup

In the event of a power failure, the system programming will be maintained for a period of two weeks by a rechargeable Ni-Cad battery.

Power Failure Backup System

Your ADIX-VS system may be equipped with gel cell batteries to maintain normal system operation in the event of a power failure.

Quick Forward using the Hold/Quick Forward Key

See Putting a Call On Hold on page 50.

Remote Programming/Diagnostics

The ADIX-VS database may be accessed and edited from a Windows® PC. Connection to the ADIX-VS may be via direct connection, dial-up connection via modem, or with the addition of the IX-IP SEGWAY Serialto-Ethernet Gateway, over a LAN/WAN Ethernet connection. When a modem connection is used, the line used for remote programming may also be used as a regular outgoing line, and manually switched for modem use. The remote programming package includes a diagnostic service for system maintenance and troubleshooting.

Station Coaching

Station Coaching includes two actions: Monitoring and whisper paging (hereafter called 'whisper monitor'). A digital key telephone is able to whisper monitor a digital key telephone after invoking the Monitor feature. The Monitoring station can whisper monitor other stations while on an outside call or an intercom call and press the 🗈 key to speak to the monitored station without the calling station hearing.

SMDR

Station Message Detail Recording (SMDR) allows you to connect an RS232C compatible serial printer to ADIX-VS. This printer will show all incoming and outgoing call activity. The following information will be shown:

- Call number 001-999
- Date of the call
- Extension number that made/received the call
- Start time of the call
- Duration of the call
- Outside line number used for the call
- Number dialed for the call
- Account code number for the call
- Other notes for the call

Station Coaching

Station Coaching includes two actions: Monitoring and whisper paging (hereafter called 'whisper monitor'). A digital key telephone is able to whisper monitor a digital key telephone after invoking the Monitor feature. The Monitoring station can whisper monitor other stations while on an outside call or an intercom call and press the 🗈 key to speak to the monitored station without the calling station hearing.

System Clock

ADIX-VS is equipped with a real time clock that provides an indication of the current time and duration of both incoming and outgoing calls on the LCD display of Iwatsu telephones. The clock also has a perpetual calendar that eliminates the need to change the date. **Note:** The ADIX-VS is Year 2000 compliant.

System Speed Dial

Up to 90 frequently dialed numbers may be programmed in the system for abbreviated dialing. The numbers may or may not be restricted to certain extensions.

ADIX-VS System Features - 41

Text Messaging

The text messaging feature allows station users to send a 16-character text message to another system extension. There are two types of text messages, system text messages and personal text messages. A text message may be sent as either a *busy bypass/no answer text message* or as a *stored text message*. Busy bypass/no answer text messages appear on the recipient's LCD immediately. Stored text messages do not appear on the display, but instead, light the recipient's [TXT MSG] key. Stored text messages are saved in memory until the recipient manually displays them.

Up to 90 system text messages and 10 personal text messages are available to each user. System text messages are accessible by all ADIX-VS station users. Personal busy bypass text messages are programmed by the individual station user and may only be accessed at the specific station set.

Toll Restriction

The ADIX-VS system provides flexible toll restriction of both area and office codes, as well as the subscriber number. There are eight levels of restriction.

Tone / Pulse Dialing

Caller ID trunks may be programmed for either Touch Tone or Rotary dialing to accommodate your local telephone company central office.

Trunk Interfaces

ADIX-VS supports the following types of outside lines:

- Caller ID/Loop Start trunks
- ISDN BRI lines

Uniform Call Distribution (UCD)

Allows telephone lines to be directed to a group of telephones. Calls to the UCD group may search for an idle extension in either a Terminal or Distributed Hunting pattern. In Terminal Hunting the incoming calls always start hunting from the first telephone in the group. In Distributed Hunting, the incoming calls start hunting from the telephone following the last called telephone. In both cases, calls will hunt to the next telephone if a telephone does not answer in a predefined period of time, is busy, and in Call Forward, Absence Message or Do Not Disturb mode. ADIX-VS also provides the ability to send unanswered calls to an overflow or secondary answering position after a predefined period of time. This second answering position may be another UCD group, hunt group, extension, or attendant.

Voice Mail/Automated Attendant Integration

ADIX-VS can be equipped with an internal voice mail/automated attendant system when the optional VS-VML card is utilized. ADIX-VS will allow you to transfer, forward and record calls to a mailbox and provides you with a unique voice mail message waiting indication. ADIX-VS will also allow calls transferred from the automated attendant to be directed to messages other than the initial greeting if the desired party does not answer.

ADIX-VS System Features - 44

Section 3 -Digital Telephone User's Guide

Digital Telephones – Basic Feature Operation

This section describes basic feature operation from ADIX-VS Digital Telephones.

Making an Outgoing Call

Operation

- The receiver
- Press the button for an outside line and the outside line button will flash green
- The Wait for the dial tone
- Dial the telephone number

If you make a dialing mistake, Press the Flash button **FLASH** and start over.

Receiving an Incoming Call

Operation

When your phone rings and an outside line lamp flashes:

- Lift the receiver
- 0r
- Lift the receiver
- The Press the outside line button with the flashing light

You will be connected to the call and the outside line button will flash green.

Making an Intercom Call

Operation

- The receiver
- ☞ Wait for the dial tone
- Dial the desired extension number
- 0r
- Press the button representing the desired extension if assigned as a Multipurpose button
- Make an announcement after the tone or wait for an answer to the ring

The lamp on the intercom button **ICM** will flash red. If the extension you called is busy, you will hear a repeated intercom busy tone.

Receiving an Intercom Call

Operation

- Lift the receiver when you hear your phone ring or the caller's voice through the speaker
- 0r
- Reply through the phone's microphone without lifting the receiver

The lamp on the Intercom button **ICM** will flash red.

Making an E-Response Help Call

The E-Response Help Call feature allows specific system extensions to simultaneously call a group of extensions and access a system paging port upon dialing a specific ICM Group access number or, if the station remains off-hook without dialing for a programmable period of time. When the E-Response help call is placed, the key telephone displays of the called extensions in the E-Response ICM Group will display a programmed message and the calling party's extension number and station ID.

Operation

- Lift the receiver and remain off hook on intercom for a specific time period programmed in the system.
- 0r
- Lift the receiver to make an intercom call. Begin dialing. Between digits stop dialing for more than 10 seconds.

Note: If a user dials a valid trunk access or optimized routing access code, this feature will not activate.

0r

Dial the E-Response Group access number when you hear the Intercom Dial Tone.

Transferring a Call to Another Extension

Operation

When speaking on an outside line:

- Transfer button **TRAN** and the lamp will flash red
- The Wait for the dial tone
- Dial the desired extension number
- 0r
- Press the button representing the desired extension if assigned as a Multipurpose button
- Thang up or announce the call then hang up

If the call is not answered it will return to your phone.

Putting a Call On Hold

HOLD/QUICK FORWARD key is used as an option to the Hold/DND

key. This key provides the same feature as the **Hold/DND** key except callers are sent to the Fixed Call For-ward destination (such as voicemail) instead of hearing a DND tone.

Operation

When speaking on an outside line:

Press the Hold button HOLD/DND

To use the HOLD/QUICK FORWARD key to forward a call:

From an idle condition, press the HOLD/QUICK FORWARD key. This key toggles ON and OFF.

A green lamp flashes intermittently on your phone and a red lamp flashes on other phones for that outside line. If the call is on Hold too long, your phone will ring again.

Picking Up a Call On Hold

Operation

- Lift the receiver
- Press the green intermittently flashing button on your phone or the red flashing button on another phone representing the desired outside line

The lamp on the outside line button will flash green.

Putting a Call On Call Park

Call Park is similar to Hold but allows others to pick a call up even though they do not have a button representing the desired outside line.

Operation

To put a call on Call Park at your extension:

- When speaking on an outside line:
- Press the Call Park button **PARK** and the lamp will intermittently flash green
- Hang up
- The call is on Call Park too long your phone will ring.

To pick up a call on Call Park at your extension:

- ☞ Lift the receiver
- Press the flashing Call Park button PARK and the lamp on an outside line button will flash green

To put a call on Call Park at another extension:

When speaking on an outside line:

- Press the Transfer button TRAN
- The Press the Call Park button **PARK**
- Dial the extension number or press the DSS key or CCV key of the station at which you want to park the call.
- Hang up
- The call is on Call Park too long your phone will ring.

To pick up a call on Call Park at another extension:

- The receiver
- The Wait for the dial tone
- The Press the Feature button **FEAT** then dial 34
- 0r
- Press the Park Pick-Up button PARK P/U if assigned as a Multipurpose button
- Dial the extension number of the phone that placed the call on Call Park and the lamp on an outside line button will flash green

To pick up a call on Call Park at the attendant position:

- Lift the receiver
- The Wait for the dial tone
- Dial the number announced by the attendant and the lamp on an outside line button will flash green

Handling a Second Call

Operation

When a second call rings at your phone and you do not want to hang up on the first call:

The Press the Hold button **HOLD/DND** to place the call on Hold

Or

- Press the Call Park button PARK to place the call on Call Park
- The Press the button representing the second call
- Answer the second call

To return to the first call:

The Repeat the same procedure

Digital Doorphone Operation

Digital Doorphones provide an economical and simple method to allow visitors to make an intercom call to gain entrance to your building.

Operation

To place a call from a Digital Doorphone:

- Press and release the button on the Digital Doorphone, you will hear a ringing tone and the lamp on the button will change from red to green
- Wait for an answer
- Announce yourself

To call a Digital Doorphone:

- Lift the receiver
- Dial the assigned extension number
- 0r
- Press the DSS button assigned for the desired Digital Doorphone
- Make an announcement



Digital Telephones - Advanced Features

Caller ID, ANI, DNIS Information Storage

Allows you to store and display the telephone number for a call on a caller ID, ANI or DNIS line. The system may be programmed to save information for all calls, or abandoned calls only.

Operation

To view stored call information:

- For station: At ICM dial tone press the illuminated USAS key once to display information about the first call to your station. Press [*] to scroll forward and [#] to scroll backward in sequence.
- For trunk group: At ICM dial tone press the illuminated USATn key once or the USAT key + trunk group number to display information about the first call on a specific trunk group. Press [*] to scroll forward and [#] to scroll backward in sequence.

To make a call by automatically dialing the stored Caller ID or ANI number:

- The With a call record displayed, Do one of the following:
- For station: Press the USAS key a second time, or press FLT, OPT, or COL.
- For trunk group: Press the USAT + trunk group number or USATn key a second time, or press FLT, OPT, or COL.

To add digits to the displayed number before calling out:

- The With a call record displayed,
 - Dial the additional digits to be added to the outgoing number (the added digits do not appear on the display when entered), then.
- To one of the following:
- For station: Press the USAS key a second time, or press FLT or COL.
- For trunk group: Press the USAT + trunk group number or USATn key a second time, or press FLT or COL.
- Press USAT, USATn.

To delete saved call information from system memory:

With a call record displayed, press the **USD** key.

Absence Message Display

Allows you to leave an advisory message for a display phone caller if you should leave your office. Four messages are available:

Return at (time) Return on (date) Meeting at (time)

Call (number)

This feature only works with a Multipurpose button programmed for Absence Message **ABS.MSG**

Operation

To register a message:

- Press the Speaker button SPKR
- The Press the Absence Message button **ABS.MSG**
- For Return At:
- Time Dial 1 then dial the **TIME IN MILITARY TIME**
- For Return On:
- Tial 2 then dial the date **M** : **D**
- For Meeting At:
- $\overset{\circ}{\ }$ Dial 3 then dial the time in military time **H** : **M**
- For Call:
- $\overset{\circ}{=}$ Dial $\overset{\frown}{=}$ then dial the telephone number then dial $\overset{\#}{=}$
- The Wait for a confirmation tone
- Press the Speaker button SPKR

The message will appear on the display.

- To erase a message:
 - Press the Speaker button **SPKR**
 - Tress the Absence Message button **ABS.MSG**
 - 🗇 Dial 🔳
 - The Wait for a confirmation tone
 - Press Speaker button SPKR

The message will no longer appear on the display.

Account Code

Allows you to enter a one- to twelve-digit code to either identify the caller or identify the party the call was made for. These codes are printed out with the SMDR information. Account code entry may be done before the party answers, during a conversation, or after the other party hangs up.

Operation

- P Lift the receiver
- Press an outside line button
- Wait for the dial tone Ŧ
- The Press the Feature button **FEAT** then dial
- 0r
- P Press the Account Code button ACCT if assigned as a Multipurpose button
- Dial the code then dial \square Ŧ

You will hear a confirmation tone.

Alphanumeric Display

ADIX-VS Digital Multiline Display Telephones have a 2-line, 16-character alphanumeric LCD display that provides the following information:

Abandon Call Information

- Forwarding Extension Numbers
- Message Waiting Identification
- Absence Messages
- Account Code Input
- Call Duration Timer
- Callback CO/ICM
- Called Party Identification
- Called Party Status -**BUSY/DND**
- Caller ID/ANI/DNIS Calling Party Identification
- Camp-On

- Real Time Clock
- Recall CO/ICM
- Reminder
- **Ringing Outside Line Identification**
- System Name
- Text Messages

Operation

To scroll or change the information on the display during a conversation:

- ☞ Press the Feature button FEAT then dial 63
- 0r
- Press the Display button **DISPLAY** or Display Change button
 DISPLAY CHANGE if assigned as a Multi-purpose button

Alphanumeric Speed Dial by Name

The Alphanumeric Speed Dial By Name feature allows users to access the speed dial list alphabetically. When a user wants to place a outside line outgoing call with the Speed Dial feature, the user can search the desired Speed Dial destination alphanumerically by name.

When a user accesses the Alphanumeric Speed Dial Feature, the system displays the first name in the System Speed Dial or the user's Station Speed Dial. The user can then scroll forward or backward through the Speed Dial list or perform a zoom search by entering specific characters or numbers with the keypad. As more characters are entered, the system narrows the search. When the desired name is found, the number can then be dialed.

Operation

- Tress SPEED
- Press SPEED
- To search for a registered name, press the dial pad until the desired characters are displayed
- To focus your search:
 - Enter a character
 - Press HOLD/DND
 - Enter another character
- To scroll through the registered names, press FORWARD [#] or BACKWARD [*]
- When the desired name is found, press SPEED to dial the number

Alternate Tone/Pulse Dialing

Allows you to change the dial signaling from Dial Pulse (Rotary) to DTMF (Touch Tone) after an outside call has been answered. This will allow you to use enhanced communications devices like Voice Mail and Automated Attendant.

Operation

After the call is answered:

- The Press the Feature button **FEAT** then dial 13
- 0r
- Press the Alternate button ALTER and the lamp will be solid red

Autodial Unit

An Autodial Unit may be added to Digital Telephones to provide an additional sixteen buttons for Speed Dial. The Speed Dial numbers are programmed through system programming.

Operation

To make an Autodial Call:

- ☞ Lift the receiver
- The Press the desired button on the Autodial Unit

Automatic Outside Line Answer / Hold

This programming option allows you to receive a second call automatically by simply pressing the Hold, Call Park, or existing outside line button.

Operation

While on a call:

Press the Hold HOLD/DND, Call Park PARK, or existing outside line button

Automatic Repeat Dialing

Allows you to instruct ADIX-VS to dial an outside party until they answer. This is accomplished by having ADIX-VS periodically activate the speaker and dial the outside party's number. Should they answer, you will hear their voice through the speaker. In order to establish a conversation, you must pick up their receiver. Should you be away from your telephone when the called party answers, they will hear silence and ADIX-VS will try to call later.

Operation

If the called party does not answer or is busy:

- Do not hang up
- Press the Automatic Repeat button **REPEAT** and the lamp will be solid red.
- Hang up

To Cancel:

- Press the Speaker button **SPKR**
- The Press the Automatic Repeat button **REPEAT**
- \bigcirc Dial \square and the lamp will be off
- The Wait for a confirmation tone
- Press the Speaker button SPKR
- Or
- The receiver while ADIX-VS is dialing the outside party

Background Music

An external music source such as a FM tuner may be connected to the system to provide background music either through the speaker in the phone or an external paging system. The music is automatically turned off if the phone or external paging system is in use.

Operation

To turn on Background Music through your phone:

- The Press the Feature button **FEAT** then dial
- 0r
- Press the Background Music button BGM if assigned as a Multipurpose button and the lamp will be solid red

To turn off Background Music through your phone:

- $\overset{\circ}{=}$ Press the Feature button **FEAT** then dial \bigcirc 6 2
- Or
- Press the Background Music button BGM if assigned as a Multipurpose button and the lamp will be off

Barge-In

Allows you to enter an existing conversation. A warning tone is sent to inform the parties that a three way conference has been established.

Operation

- Dial the desired extension number
- Or
- Press the desired outside line button
- Press the Add button ADD

Built-In Speakerphone

ADIX-VS Digital Telephones are equipped with a Built-in Speakerphone. Use of the Speakerphone allows for complete hands-free operation on external calls.

Operation

To make a call:

- The Press the Speaker button **SPKR** and the lamp will flash red
- $\overset{\mbox{\tiny \ensuremath{\mathbb{T}}}}{\mbox{-}}$ Wait for the dial tone
- Tial the desired telephone number

To answer a call:

Press the Speaker button **SPKR** and the lamp will flash red

To end a call:

The Press the Speaker button **SPKR** and the lamp will be off

Busy Bypass/Autodial Unit

The Busy Bypass/Autodial Unit Works the same as the Autodial Unit with the additional capability to allow a second call to be announced through the speaker in this unit while you are involved in a conversation using your receiver. You may respond through the microphone without having to put the original party on Hold. Use of this unit requires an additional station port and an IX-BPCU or an IX-BPAD.

Busy Bypass Tone Calling

Allows you to be informed that there is a second call waiting for you to answer. This is accomplished by providing a muted tone through the speaker in the busy telephone. External and internal calls may be differentiated by frequency. This feature is a system programming option and may not be present in all systems.

Operation

To answer the waiting call:

- Hang up on the first call and press the button representing the waiting call
- 0r
- Press the Call Park button **PARK** and press the button representing the waiting call

To alternate between calls:

The Press the Call Park button **PARK**

Busy Bypass Voice Calling

While you are involved in a conversation using your receiver, Busy Bypass Voice Calling allows you to receive a voice announcement through the speaker in a Busy Bypass Unit informing you that someone else wishes to speak with you. You may respond through the microphone without having to put the original party on Hold. This feature is only available if your phone is equipped with a Busy Bypass Unit.

Operation

To answer the waiting call:

- Hang up on the first call and press the button representing the waiting call
- 0r
- Press the Call Park button **PARK** and press the button representing the waiting call

To alternate between calls:

The Press the Call Park button **PARK**

Busy Intercom Callback

Allows you to instruct ADIX-VS to inform you when a busy extension that you called becomes idle. When the extension becomes idle, ADIX-VS will call you back. After you answer, the desired extension will automatically be dialed. If your phone has a display, the display will inform you that the call is a Callback and identify the extension. You may leave one Callback message.

Operation

When you make an intercom call and the extension is busy:

- Do not hang up
- The Press the Feature button **FEAT** then dial
- 0r
- Press Busy Intercom Callback button ICM CB button if assigned as a Multipurpose Button and the lamp will be solid red
- The Wait for a confirmation tone
- Hang up

To Cancel all Intercom Callbacks

- Press the Speaker button SPKR
- \checkmark Press the Feature button **FEAT** then dial \bigcirc 43
- Or
- Press Busy Intercom Callback button ICM CB if assigned as a Multipurpose button then dial and the lamp will be off
- **Wait for a confirmation tone**
- Press the Speaker button SPKR
Busy Number Callback

Allows you to instruct ADIX-VS to periodically call you to try calling a previously dialed outside number again. To have ADIX-VS dial the number simply pick up the receiver.

Operation

When you dial an outside number and there is no answer or a busy signal:

- Do not hang up
- $\overset{\circ}{=}$ Press the Feature button **FEAT** then dial 24
- 0r
- Press the Busy Number Callback button TRNK C/B if assigned as a Multipurpose Button and the lamp will be solid red
- Hang up

To change the Callback time interval:

Dial the desired interval time in minutes 1–9 before you hang up

To Cancel:

- Press the Speaker button SPKR
- The Wait for the dial tone
- The Press the Feature button **FEAT** then dial $\bigcirc 24$
- 0r
- Press the Busy Number Callback button TRNK C/B if
- assigned as a Multipurpose button then dial $\boxed{\ }$ and the lamp will be off
- The Wait for a confirmation tone
- The Speaker button **SPKR**

Busy Outside Line Queuing

Allows you to instruct ADIX-VS that you wish to be notified when the outside lines are no longer busy. When an outside line becomes available, your phone will ring. Picking up the receiver will give you outside dial tone. If you previously dialed the outside number, that number will automatically be dialed when the receiver is picked up.

Operation

When attempting to make an outside call and all lines are busy:

- Do not hang up
- Press the Feature button FEAT then dial 23 and you will hear tones
- Total the phone number
- 0r
- Press the Busy Outside Line Queue button TRNK QU if assigned as a Multipurpose button, you will hear tones and the lamp will be solid red
- To Dial the phone number
- 👁 Hang up

To Cancel:

- Press the Speaker button **SPKR**
- The Wait for the dial tone
- The Press the Feature button **FEAT** then dial $\bigcirc 2 \bigcirc$
- 0r
- Press the Busy Outside Line Queue button TRNK QU if assigned as a Multipurpose button, then dial and the lamp will be off
- Wait for confirmation tone
- Press the Speaker button **SPKR**

Busy Overriding

Allows you to alert a busy extension user that you are waiting to speak with them. The busy extension user will hear periodic tone bursts through the speaker. If they have a display the display will identify the calling party.

Operation

When you dial a busy extension:

- Do not hang up
- Press the Busy Override button OVER and you will hear a ringing signal
- Wait to be answered

To answer a Busy Override:

- Thang up on the first call
- Or
- ${\ensuremath{\,^{\ensuremath{\notmath{\mathbb{P}}}}}$ Press the Call Park button $\ensuremath{\textbf{PARK}}$
- $\ensuremath{\mathfrak{P}}$ Press the Intercom button **ICM**

To alternate between calls:

The Press the Call Park button **PARK**

Call Coverage

The Multipurpose buttons on the Digital Telephones may be programmed to allow both audible and visual indication of a call ringing at another extension. Calls made to an extension that is represented as a Call Coverage button on another phone may be answered by that phone by pressing the Call Coverage button. The visual indication is immediate and the audible indication may have one of the three modes: immediate, delayed, or no ring. When the extension monitored by a Call Coverage button is not in the ringing state, the Call Coverage button will function as a Direct Station Selection/Busy Lamp Field button. The Call Coverage feature will support Intercom Tone (ringing) and Outside Line calls. Intercom calls are indicated by a slow flashing green lamp and Outside Line calls are indicated by a fast flashing green lamp. A good application for this feature would be a secretary that needs to answer calls for others in the office if they are away from their phones.

Operation

To answer a call ringing at another extension:

- When you hear the special Call Coverage tone or see either a slow
- or fast green flashing lamp on a Call Coverage button:
- Lift the receiver
- Press the desired Call Coverage button

You will be connected to the calling party. Intercom calls will appear on your phone's Intercom button **ICM** and Outside Line calls will appear on your phone's Outside Line button.

To change the audible indication mode:

- Do not lift the receiver
- Press the Feature button FEAT
- Press the desired Call Coverage button and the present mode will be represented by the lamp on the button and the display.

immediate:	display = Immed.	lamp = fast green flash
delayed:	display = Delayed	lamp = slow green flash
no ring:	display = No ring	lamp = solid green

- ☞ Dial 1 for immediate ring mode
- ☞ Dial ² for delayed ring mode
- \bigcirc Dial \bigcirc for no ring mode

Call Forwarding

Use the new Flexible Call Forward feature to forward calls to an internal destination or external line using Personal Speed Dial numbers 90-99. The user can set separate call forward destinations for Intercom Incoming and Outside Line Incoming calls. With this feature, you may set all Intercom calls to forward to your cell phone and set all outside calls to forward to your voice mail. The Flexible Call Forward feature also incorporates Follow Me capabilities. Follow Me lets you receive your calls internally at any station you choose.

Operation

Set Forward Destination

- 1. Lift the handset or press SPKR
- 2. Press FWD
- 3. Enter the Call Type you wish to forward
 - 1 = All calls (Outside Line/Intercom)
 - 2 =Outside Line calls only
 - 3 = Intercom calls only
- 4. Enter the Flexible Call Forward Mode
 - 1 =All calls to another extension or hunt group
 - 2 = Busy/No Answer calls to another extension or hunt group
 - 3 = No Answer calls to another extension or hunt group
 - 4 = All calls forward to an external number using Personal Speed Dial Codes 90-99
- 5. Complete one of the following steps:
 - If you chose Mode 1, 2, or 3, enter the extension or hunt group number
 - If you chose Mode 4, enter the Personal Speed Dial Code

Note: When the setting is valid, you hear a confirmation tone. When it is invalid, you hear a warning tone.

Forward Cancel

- 1. Lift the handset or press **SPKR**
- 2. Press FWD
- 3. Press 🗈
- 4. Enter the Call Type number you wish to cancel
 - 1 = Cancel Forwarding of All calls (Outside Line/Intercom)
 - 2 = Cancel Forwarding of Outside Line calls only
 - 3 = Cancel Forwarding of Intercom calls only

Set Active/Inactive

- 1. Press FWD
- 2. Enter the Call Type you wish to forward
 - 1 = All calls (Outside Line/Intercom)
 - 2 =Outside Line calls only
 - 3 = Intercom calls only

Set Follow Me Destination

- 1. Lift the handset or press **SPKR**
- 2. Press FWD + FWD
- 3. Enter the Call Type you wish to forward
 - I = All calls (Outside Line/Intercom)
 - 2 =Outside Line calls only
 - 3 = Intercom calls only

Enter the extension number of the originating forwarding station.

Call Monitoring

Allows you to silently monitor a conversation on another extension or line. In order for this feature to operate on intercom off-hook signaling must be disabled.

Operation

To monitor a conversation on a outside line:

- ☞ Lift the receiver
- The Wait for the dial tone
- Press the outside line button
- Press the Monitor button **MONITOR**

To monitor a busy extension's conversation:

- Lift the receiver
- Dial an extension number
- The Wait for busy tone
- Press the Monitor button **MONITOR**

Call Park/Swap

Allows you to alternate between two conversations.

Operation

- Press the Call Park button **PARK** to place the call on Call Park and the lamp will intermittently flash green
- Answer or initiate a second call
- Press the Call Park button PARK which allows you to go back to the original call with the second call now on Call Park and the lamp will intermittently flash green

You may continue to alternate between conversations by pressing the Call Park button.

Call Pick-Up

Allows you to answer a call ringing at someone else's phone. There are three types of Call Pick-Up: Direct Call Pick-Up, Internal Group Call Pick-Up, and External Group Call Pick-Up.

Direct Call Pick-Up

Allows you to answer a call ringing at any extension in the office.

Operation

- Lift the receiver
- The Wait for the dial tone
- Press the Feature button FEAT then dial 33
- Or
- Press the Direct Call Pick-Up button **DIRCT P/U** if assigned as a Multipurpose button
- Dial the ringing extension number

Internal Group Call Pick-Up

Allows extensions to be grouped together. This grouping eliminates the need to dial the ringing extension number in order to answer the call.

Operation

- Lift the receiver
- The Wait for the dial tone
- The Press the Feature button **FEAT** then dial 31
- Or
- Press the Group Call Pick-Up button GRP P/U if assigned as a Multipurpose button

External Group Call Pick-Up

Allows you to answer a call ringing in a Group Call Pick-Up group that they are not part of.

Operation

- The receiver
- The Wait for the dial tone
- The Press the Feature button **FEAT** then dial
- 0r
- Press the External Group Pick-Up button EXT P/U if assigned as a Multipurpose button
- Tial the ringing external group number

Caller ID Display Change

The information displayed on the station LCD during incoming ringing, call in progress, incoming forwarded call ringing, and campedon/transferred call ringing may be changed by pressing a **CID DISPLAY CHANGE** key. This feature may be used only incoming calls on Caller ID/ANI or DNIS lines. Ten different display modes are available. The display mode is determined by the type of call and status of call.

Operation

During call in progress: Press the CID DISPLAY CHANGE button

Camp-On

Allows you to alert a busy extension user that an outside call is waiting for them to answer. The busy extension user will hear periodic tone bursts through the speaker. If they have a display, the display will first indicate the extension that sent the call followed by CAMP-ON. If the busy extension does not respond within a specified period of time, the call will return back to you.

Operation

To Initiate Camp-On:

- Transfer button **TRAN**
- The Wait for the dial tone
- Dial the desired extension number
- 📽 Hang up

To answer a Camp-On:

- Thang up on the first call
- Or
- Press the Hold button HOLD/DND to place the first call on Hold
- 0r
- Press the Call Park button PARK to place the first call on Call Park
- Answer the second call

Clear Call

Allows you to initiate a new intercom call without having to hang up if the called extension does not answer or if there was a dialing mistake.

Operation

When you make an intercom call, but the called extension cannot be reached, and you wish to call another extension:

- Do not hang up
- Dial the second extension number

Conference

ADIX-VS allows you to converse with three other people in one conversation. There may be any combination of inside extensions or outside lines. ADIX-VS will support a maximum of two four-party conferences simultaneously.

Add-On

(up to 1 outside + 3 inside parties or 4 inside parties)

While speaking on an outside or intercom call:

- ${\mathscr P}$ Press the Transfer button **TRAN**
- The Wait for the dial tone
- Dial the desired extension number
- ${}^{\mbox{\tiny \ensuremath{\mathbb{P}}}}$ Press the Add button **ADD**

After you hear a tone, all parties will be connected. To add another extension, repeat the same procedure.

Multiline

(up to 3 outside + 1 inside parties)

While speaking on an outside call:

- Press the Hold button **HOLD/DND** to place the call on hold
- The Make the second outside call
- Press the Add button **ADD** after the second party answers
- Press the 1st line that was placed on hold

0r

If your phone only has one outside line button:

- Press the Call Park button PARK to place the call on Call Park
- The second call
- The Press the Add button **ADD** after the second party answers
- Press the flashing Call park button **PARK**

All three parties will be connected. To add the 3rd outside line, repeat the same procedure.

Trunk-to-Trunk

(up to 2 outside parties)

When you are speaking with two outside parties in a multiline conference call and wish to leave the conversation:

- Press the Hold button HOLD/DND
- Hang up

The two outside parties will still be in a conference.

To get back in the Multiline Conference:

- Lift the receiver
- The Press one of the outside line buttons that are in the conference

Consultation Hold

Places an outside call on temporary hold before a transfer or conference is completed. The call will automatically return to you if the desired transfer extension does not answer or if you dialed incorrectly. If you have a display on your phone, the display will show Camp On RCL and the name of the person that the call was sent to.

Operation

While on an outside call:

Press the Transfer button TRAN and you will hear the dial tone

Conversation Recording

The Conversation Recording feature allows an ADIX-VS station user to record a station-to-station, outside line, or conference call to voice mail. This feature is available at any station that has been assigned a Conversation Recording **REC** key. **Note:** Your voice mail system must support this feature.

IMPORTANT NOTICE REGARDING THE CONVERSATION RECORDING FEATURE

In certain states it is illegal to intercept and/or record telephone calls.

In certain states and under certain circumstances it is illegal to intercept for the purposes of listening in and/or recording telephone calls. Because such activity is not illegal in all jurisdictions and may be permitted in training and/or monitoring of personnel, this telephone system can be programmed to permit interception and/or recording with or without warning to those on the line. Before utilizing the system for such purposes, you are advised to consult with an attorney familiar with laws of the jurisdiction in which you utilize such feature.

IWATSU AMERICA, INC., its distributors, and the manufacturers responsible for this feature make no representations with respect to the legality of its use and disclaim any liability for claims and/or damages arising from the use or misuse of this feature.

Operation

While on a call:

- Press **REC** To start voice recording:
- While recording press REC a second time or hang up to stop recording.

To playback a recorded conversation:

The conversation is saved as a voice mail message. For playback instructions consult your voice mail program documentation.

Delayed Ringing

When an incoming outside line call is not answered within a pre-set time, a second group of stations start ringing and the ringing signal changes to an incoming alarm. A delayed ringing assignment can be programmed for each line. This assignment is the same for both Day and Night modes. If the line is programmed for attendant outside line intercept, the primary and delayed ringing stations will stop ringing when attendant intercept occurs.

Direct Outside Line Appearance

Digital Telephones may have Multipurpose buttons programmed as an outside line for incoming and outgoing calls.

Operation

- Lift the receiver
- $\$ Press the outside line button and you will hear the dial tone

Direct Station Selection/Busy Lamp Field

The Multipurpose buttons on the Digital Telephones may be programmed to allow one-touch intercom calling to preassigned extensions. These buttons will provide an indication if the extension programmed to that button is busy or not. If the extension is busy the light will be lit.

Operation

To place an extension call with one touch:

- Lift the receiver
- Wait for the dial tone
- Press the Direct Station Selection button DSS for the desired extension

Distinctive Ringing - Outside Line Calls

Each outside line can be assigned one of four available ringing tones. This feature applies only to Iwatsu Key Telephones.

Distinctive Ringing - ICM/Outside Line

Intercom and outside line calls provide different ringing tones.

Do Not Disturb (DND)

Allows you to make your phone busy so you will not be interrupted by phone calls. However, the following type of calls may override Do Not Disturb: DSS Calls, Operator Calls, Secretarial Calls and Executive Override Calls.

Operation

To activate:

Press the Hold button HOLD/DND and the lamp will be solid red

To cancel:

The Press the Hold button **HOLD/DND** and the lamp will be off

Exclusive Hold

Allows you to place an outside call on Hold that cannot be picked up by another extension.

Operation

To place a call on Exclusive Hold:

Press the button representing the outside line which you were speaking on and the lamp will intermittently flash green

To retrieve a call from Exclusive Hold:

Press the outside line button once again for that call and the lamp will flash green

The call may only be retrieved by the phone that placed it on Exclusive Hold.

Executive Override

Is the same as a Busy Override with the additional ability to override an extension in Do Not Disturb. This override may be either a voice announcement or tone signal.

Operation

When dialing an extension that is busy or in Do Not Disturb

- Do not hang up
- Press the Override button OVER
- Make a voice announcement or wait for a response to the tone signaling, your choice is dependent on system programming

Extension Number Display

Allows you to display your extension number if you have a display phone.

Operation

To display an extension:

The Press the Feature button **FEAT** then dial

Feature Button Display

Allows you to display what is programmed on your phone's feature buttons.

Operation

To display a feature button:

- The Press the Feature button **FEAT** then dial # 9
- Press the desired feature button

Flash

Allows you to receive dial tone on the same outside line without having to hang up. Flash may also be used to receive intercom dial tone to place another intercom call. Two different Flash settings may be programmed to allow for the use of Centrex or PBX features.

Operation

After you complete your call or if you make a dialing mistake:

- The Press the Flash button **FLASH**
- Total the new number

If you wish to use Centrex features:

- Tress the Short Flash button **S FLASH**
- Dial new number or feature code

If your phone does not have buttons assigned for Flash or Short Flash:

- $\overset{\circ}{=}$ Press the Feature button **FEAT** then dial 11 for Flash
- The Press the Feature button **FEAT** then dial **1** for Short Flash

Floating Outside Line Group Access

Allows for a number of outside lines to be assigned to one of 60 groups. These groups may be used for incoming calls, outgoing calls or both incoming and outgoing calls.

Operation

To access an outside line group:

- Lift the receiver
 - Press the Float button FLT then dial the outside line group number 1–10 for the desired group
- 0r
- Press the Float button FLT for the desired group if that group is assigned as a Float button on a Multipurpose button

Forced/Verified Account Code

Requires you to enter a 1-12 digit code to make outside calls. These codes may be either fixed or variable in length and each telephone may be programmed for one of the four following account code entry options.

FORCED-TOLL:code entry required only for toll callsFORCED-ALL:code entry required for all callsVERIFIED-TOLL:valid code entry required only for toll callsVERIFIED-ALL:valid code entry required for all calls

A table of 10 phone numbers may be programmed to allow calling without account code entry. This option is very helpful because it allows important emergency numbers to be dialed by anyone. The verification table, for verified account code entry, shares memory with System Speed Dial and may contain 80 account codes. The Forced/Verified Account Code programming allows the option of having or not having the account displayed on the LCD of the phone and the SMDR printout.

Operation

- The receiver
- Press an outside line button
- The Wait for the dial tone
- Dial the desired phone number
- 👁 Dial 🗵
- ☞ Wait for the account code entry tone
- Dial a code
- @ Dial \blacksquare only if your code entry is variable in length

Full/Half Duplex Speakerphone Mode Switching

IX-12KTD/S-3 Digital Key Telephones can be changed from full duplex to half duplex through the operation of the **Speaker Duplex** key.

Operation

To switch from the Full Duplex Mode to the Half Duplex Mode:

The Press Speaker Duplex or press FEAT $\bigcirc + \bigcirc + \bigcirc$

To switch from the Half Duplex Mode to the Full Duplex Mode:

```
Press Speaker Duplex or press FEAT 6 + 6
```

Group Monitoring

Allows you to let others listen to your conversation through the speaker of the phone while you converse with the receiver.

Operation

```
While speaking to your party with the receiver:
Press the Speaker button SPKR
```

Group Park

By placing a call on Group Park all extensions with the appearance of that Group Park button will have a flashing indication and be able to pick up that call.

Operation

To place a call in Group Park:

Press the Group Park button **G PARK** and the lamp will intermittently flash green on your phone and flash red on other phones

To retrieve a call in Group Park:

- The receiver
- ☞ Wait for the dial tone
- The Press the Group Park button **G PARK** and an outside line button will flash green

To retrieve a call from a phone that does not have your Group Park button:

- The receiver
- The Wait for the dial tone
- Dial your Group Park code

Hands-Free Answerback On Intercom

Allows you to answer an intercom call without lifting the receiver. The microphone may be turned off if desired.

Operation

To turn on Hands-Free Answerback:

- The Press the Feature button **FEAT** then dial
- Or
 - Press the MIC OFF button MIC OFF if assigned as a button and the lamp will be off

To turn off Hands-Free Answerback:

- \checkmark Press the Feature button **FEAT** then dial \bigcirc \bigcirc \bigcirc 1
- 0r
- Press the Mic Off button MIC OFF if assigned as a button and the lamp will be solid red

Headset Button

Allows you to alternate between using the handset (receiver) and the headset.

Operation

For headset operation:

The Press the Headset button and the lamp will be solid red

For handset operation:

The Press the Headset button and the lamp will be off

Headset Control Key

The **Headset Control** key allows you to control a headset without using the **Connect** or **Release** key. This key is also supported on the IX-12KTD/S-2 and previous models of ADIX Digital Key Telephones, although they require a headset adaptor box to switch the audio between handset and headset. This key is a replacement for the **Headset** Button.

Operation

To begin a call:

The Press the **Headset Control** key while the phone is idle.

To answer a call:

- Press the Headset Control key when receiving a ringing or incoming call.
- To end a call:
 - Press the Headset Control key to disconnect when finished with the call.

To transfer a call using Screened Transfer:

- Tress the **TRAN** key.
- Total the telephone number.
- When the party answers, press the **Headset Control** key.
- To transfer a call using Unscreened Transfer:
- Tress the **TRAN** key.
- Total the telephone number.
- While waiting for the called party to answer, press the Headset Control key.

To place a call on hold:

- The Press the **HOLD/DND** key. An ICM dial tone is heard.
- Total another number or press the **Headset Control** key.

To retrieve a call from hold with Headset Control key idle:

Press the Headset Control key, then press the line key on which the party is holding.

To receive a call from hold with Headset Control key active:

The Press the line key where the party is holding.

To retrieve a message:

The Press the **MBOX** key, then the **Headset Control** key.

To change from headset use to speakerphone use:

The Press the **SPKR** key, then press the **Headset Control** key.

To answer an ACD call:

Press the Headset Control key. ACD calls do not produce an audible ring in the headset.

Headset Connection

Digital telephones may operate with a headset instead of the handset (receiver). Use of the headset requires the handset to remain in the cradle of the phone and the headset control button to be switched to the on position.

Operation

To make a call:

- Press the button representing the type of call you wish to place
- The Wait for the dial tone
- Dial the desired number

To answer a call:

The Press the button representing the incoming call

To hang-up:

Press the Release button RLS

To transfer a call:

- Press the Transfer button TRAN
- Dial the desired extension number
- Or
- Press the button representing the desired extension if assigned as a Multipurpose button
- Press the Connect button CNCT

Hot Line

If your phone is programmed to have this feature every time you lift the receiver or press the Speaker button **SPKR** a call will be placed to a predetermined extension.

Operation

- Lift the receiver
- 0r
- Press the Speaker button SPKR

Howler Tone

If your receiver remains off the receiver button too long after no action is taken, ADIX-VS will provide a tone to alert you of this condition.

Operation

The Replace the receiver on the receiver button

Last Number Redial

Allows you to automatically dial the last outside number called.

Operation

- Lift the receiver
- \bigcirc Wait for the dial tone
- The Press the Speed Dial button **SPEED**
- 👁 Dial 🗐

Master Hunt Groups

ADIX-VS allows extensions to be programmed into Hunt Groups. Each Hunt Group is assigned an access code and when dialed the system searches for the first idle extension.

Operation

To call a Hunt Group:

- Lift the receiver
- The Wait for the dial tone
- Dial Hunt Group access code
- 0r
- Press the Hunt Group button HUNT if assigned as a Multipurpose button

Memo Dial

Allows you to save a telephone number in memory while you are speaking on an outside line. The memory is shared with Save Number Redial.

Operation

While on a conversation:

- Press the Feature button FEAT then dial 22
- To Dial the phone number
- 0r
- Press the Memo button **MEMO** if assigned as a Multipurpose button
- Dial the phone number
- Press the Memo button **MEMO** if assigned as a Multipurpose button

You will hear a confirmation tone.

To make a Memo Dial call:

- Lift the receiver
- The Wait for the dial tone
- Press an Outside Line button
- The Press the Feature button **FEAT** then dial **2**
- 0r
- Press the Memo button **MEMO** if assigned as a Multipurpose button

Message Waiting

Allows you to light a lamp at another extension to inform them that you wish to speak with them.

Operation

To leave a message:

- When the extension you are calling is busy or does not answer:
 - Do not hang up
 - ${\mathscr P}$ Press the Message button **MSG**
 - 🖙 Dial 📕
 - ☞ Wait for a confirmation tone
 - 🖙 Hang up

The Message button **MSG** lamp will be solid red at the called extension.

To answer messages:

- When the Message button **MSG** lamp is lit at your extension:
- Lift the receiver
- The Wait for the dial tone
- Press the Message button MSG
- 📽 🗇 Dial 🖉

The system will automatically call the extension which left the message. If you have a display phone the display will indicate the number of messages left. To view all messages before returning a call, press the Message button **MSG** until the desired extension number is displayed. Then dial # to return the call. Messages left by another extension will be indicated by a solid red lamp on the Message button. Messages left by a voice mail machine will be indicated by a flashing red lamp on the Message button.

To display messages at your extension:

Press the Message button **MSG**

The display shows the extension number(s) which left you a message and the number of messages left. If you have more than 1 message, press the Message button **MSG** again for the next message to be displayed.

To cancel message waiting:

- If you want to cancel a message you left at an extension:
- The Press the Speaker button **SPKR**
- The Wait for the dial tone
- \checkmark Press the Message button **MSG** then dial \checkmark
- Tial the extension number of the message you wish to cancel
- The Wait for a confirmation tone
- Press the Speaker button SPKR

If you want to cancel all messages left at your extension:

- Press Speaker button SPKR
- The Wait for the dial tone
- Press the Message button
- \bigcirc Dial \blacksquare and the lamp will be off
- ☞ Wait for a confirmation tone
- Press the Speaker button SPKR

Microphone Cut-Off

Allows you to disable the microphone in your phone for privacy.

Operation

To turn microphone on:

- Press the Feature button FEAT then dial 61
- 0r
- Press the MIC OFF button if assigned as a button and the lamp will be off
- To turn MIC off:
 - The Press the Feature button **FEAT** then dial
 - 0r
 - Press the MIC OFF button if assigned as a button and the lamp will be solid red

Monitor Improvements

The Monitor Operation feature has been modified. It does not conflict with other features such as Whisper Page, Off-Hook Signal, Off-Hook Outside Line Ringing etc. The original Monitor feature required you to call the station you wish to monitor first and then press the Monitor key. With this enhancement, you can now press the Monitor key and dial the extension you wish to monitor.

Operation:

- To monitor a call
 - Complete any of the following steps at Intercom Dial tone:
 - Press the **Monitor** key and enter the extension number.
 - Press the Monitor key and the Direct Station Signaling button DSSn
 - Press the Monitor key and the Call Coverage button CCVn
 - Press the Monitor key and the Trunk Access number.
 - Press the Monitor key and the Direct Outside Line button COLn

Off-Hook Outgoing Call

This programming option allows you to automatically dial an outside party by simply picking up the receiver. This feature makes use of the System Speed Dial feature.

Operation

- Lift the receiver
- 0r
- Press the Speaker button SPKR if your phone is equipped with a Speakerphone

Off-Hook Outside Line Answering

Allows you to answer an outside call without having to press the button representing the ringing line.

Operation

To answer a call:

- The receiver
- 0r
- Press the Speaker button SPKR if your phone is equipped with a Speakerphone

Off-Hook Outside Line Queuing

Allows you to instruct ADIX-VS that you wish to wait for an outside line when all outside lines are busy.

This feature is used only when outside lines are grouped to appear under one or several outside line buttons.

Operation

When you press an outside line button and do not hear the dial tone:

- Do not hang up
- The stay on the line until you hear the dial tone

On-Hook Dialing

Allows you to dial an extension or outside line without having to lift the receiver. The receiver must be picked up to converse if your phone is not equipped with a Speakerphone.

Operation

- Press the Speaker button **SPKR**
- Press the desired line button
- The Wait for the dial tone
- Dial the number

Outside Line Call Restriction

The system can be programmed to restrict any phone from making outside line calls on specified outside line groups.

Outside Line Pick-Up Restriction

The system can be programmed to restrict stations from accessing incoming calls on specific outside lines. Three different levels of restriction are available. This does not affect the restricted stations ability to make outgoing calls on these lines.

Paging

ADIX-VS provides three types of paging, All Call, Group Call, and Zone Page.

All Call

Allows you to make an announcement either through the speakers in the Digital Telephones and/or an External Paging System.

- Lift the receiver
- The Wait for the dial tone

- Press the Page button PAGE and hold the button down and the lamp will flash red
- Wait for the Page tone
- The Make an announcement
- Release the Page button PAGE
- Thang up

Group Call (Internal)

Allows you to page through the speaker in a group of phones. There may be 10 groups with a maximum of 16 extensions per group.

To page through a group of phones:

- Lift the receiver
- The Wait for the dial tone
- Dial Group Call access code
- 0r
- Press the Group Call button GROUP if assigned as a Multipurpose button
- The Wait for the Page tone
- The Make an announcement
- 🖙 Hang up

Zone (External)

Allows you to access individual groups of external paging speakers.

- The receiver
- The Wait for the dial tone
- Dial Zone Page access code
- 0r
- Press the Zone Page button ZONE if assigned as a Multipurpose button
- *wait for the Page tone*
- Make an announcement
- 🖙 Hang up

Meet-Me Page Answer

Allows you to answer a page from any phone that is in the same Meet-Me Page Answer group.

- The receiver
- The Wait for the dial tone
- $\overset{\circ}{=}$ Press the Feature button **FEAT** then dial 35

- 0r
- Press the Meet-Me Page Answer button MEET-ME if assigned as a Multipurpose button

Personal Ringing Tone

You may choose one of eight personal ringing tones to distinguish ringing at your station from others.

Operation

To play a ringing tone for your system extension:

The With your station idle press **FEAT** + # + 1 - 8

To select a ringing tone for your system extension:

The With your station idle press **FEAT** + # + * + 1-6 + #

To restore default ringing tone at your system extension:

The With your station idle press **FEAT** + # + \times + \bigcirc + #

Preset Dial/Backspace Dialing

This programming option allows you to dial an intercom or an outside phone number and have the number appear on the display of your Digital Multiline Display Telephone before the call is placed. This procedure ensures that the correct number will be dialed.

Operation

To enter and display a number:

- Dial the desired number to be called and it will appear on the display
- Press FEAT to erase the digits entered one at a time starting from the right side of the display.

To make an intercom call:

The receiver and the call will be placed

To make an outside call:

- The Press an outside line button
- The receiver and the call will be placed

Prime Line Access

This programming option allows a system extension to immediately access a specific system extension, outside line, outside line group, hunt group, paging zone, or optimized routing upon going off hook.

Operation

- Lift the receiver
- Or
- Press the Speaker button SPKR if your station is equipped with a Speakerphone

Privacy/Privacy Release

All conversations are private and no one may enter a conversation unless you release the privacy for that conversation.

Operation

To release Privacy:

 \checkmark Press the Feature button **FEAT** then dial 14

- 0r
- Press the Privacy Release button PRV RLS if assigned as a Multipurpose button and the lamp will be solid red

You will hear a confirmation tone. To get back to a private conversation, repeat the procedure and the lamp will be off.

Private Line

This programming option allows a phone to have a dedicated outside line appear on one of its Multipurpose buttons. This line will have the following characteristics:

It will ring if the station is in Do Not Disturb

It will not be Call Forwarded

It cannot be accessed by other extensions

Operation

None

Protected Station

This programming option provides you the ability to prevent any calls from overriding.

Operation

None

Quick Mode Operation

This programming option enables you to access an outside line or your intercom extension by simply pressing the desired button. This activates the speaker and allows for immediate On-Hook Dialing. If your extension has a Speed Dial number assigned to a Multipurpose button, ADIX-VS will automatically select a line and dial the number.

Operation

Press the desired button for making a call

Remote Relay Control

Allows you to activate/control a remote device. Some examples would be a door opener or a monitor camera.

Operation

The Press the Remote Relay Control button **REMOTE**

Ring Muting

Allows you to turn the ringer, microphone, and speaker off at your phone. Ring Muting is recommended instead of Do Not Disturb when the Call Coverage feature is installed.

Operation

To turn the ringer off:

Press the Silent button SILENT and the lamp for that button will be solid red

To turn the ringer on:

Press the Silent button SILENT and the lamp for that button will be off

Save Number Redial

Allows you to save a number that you dialed when you receive either a busy signal or no answer. The memory for this feature is shared with Memo Dial.

Operation

While making a call:

- The Press the Feature button **FEAT** then dial
- 0r
- Press the Save Number Redial button SAVE if assigned as a Multipurpose button

You will hear a confirmation tone.

To make a Save Number Redial call:

- Lift the receiver
- The Wait for the dial tone
- The Press the Feature button **FEAT** then dial
- 0r
- Press the Save Number Redial button SAVE if assigned as a Multipurpose button

Shift Call

Allows you to initiate a new intercom call without having to hang up if the called extension does not answer or if there was a dialing mistake. This differs from Clear Call by allowing you to dial the last digit of an extension number to reach the next extension.

Operation

When you make an intercom call, but the called extension cannot be reached, and you wish to reach the next extension number:

- Do not hang up
- Total the last digit of the next desired extension number

Speed Dial

Allows you to have abbreviated outside number dialing.

System Speed Dial

Allows you to have access to frequently dialed outside numbers that are common to everyone in the office. The numbers may be 32 digits in length and may include the insertion of a pause. There are 90 available System Speed Dial Numbers (00-89).

Personal Speed Dial

Allows you to program up to 10 frequently dialed outside numbers for either one-touch or abbreviated dialing (90-99). The numbers may be 32 digits in length and may include the insertion of a pause.

Personal Speed Dial Registration

To register Personal Speed Dial numbers:

- Press the Feature button FEAT
- The Press the Speed Dial button **SPEED**
- Dial the desired Personal Speed Dial Code 90-99
- Total the phone number
- The Press the Feature button **FEAT** to end the operation

To register several Speed Dial numbers:

After entering a phone number:

- Press the Speed button SPEED
- Total the next Speed Dial Code 90-99
- Repeat the same procedure
- To register a pause time:

When registering the telephone number, at the place where you want to insert a pause:

- @ Press the Hold button **HOLD/DND**
- Total **1-9** for desired pause time in seconds

To register a Short Flash:

When registering the telephone number, at the place where you want to insert a Short Flash:

Press the Flash button **FLASH**

To register an outside line group to be selected for Speed Dialing:

- Press the Feature button FEAT
 - Press the Speed button **SPEED**
 - 🖙 Dial 📕
- Dial the desired Personal Speed Dial Code 90-99
- The desired outside line group number of -10
- The Press the Feature button **FEAT** to end the operation

To register several outside line groups:

- After entering an outside line group:
- Press the Speed button SPEED
- 📽 🛛 Dial 🗐
- The next Speed Dial Code number 90_99
- Repeat the same procedure

To register a directory name for a Speed Dial Number:

- Press the Feature button FEAT
- Press the Speed button SPEED
- 🖙 Dial 🔳
- Dial the desired Personal Speed Dial Code 90-99
- Register the letters of the name using the dial pad
- The Press the button until the desired letter is displayed
- The Press the Hold button to enter that letter or number

The name may be 10 characters.

If you make a mistake, press the Hold button to back space to the desired position.

The numbers on the dial pad represent the following for name registration:

1-,.,(space),1	² A,B,C,2	3 D,E,F,3
4 G,H,I,4	5 J,K,L,5	6 M,N,O,6
7 P,R,S,7	🖹 T,U,V,8	9 W,X,Y,9
▲ Alphanumeric	0 Q,Z,0	Upper/lower case

The Press the Feature button **FEAT** to end the operation

To register several directory names:

After entering a name:

- Press the Speed button SPEED
- 📽 🛛 Dial 🔳
- To bial the next Speed Dial Code number 90 99
- The Repeat the same procedure

To Speed Dial a Number

To Speed Dial a registered number, perform one of the following operations:

Outside Line Pre-Select (you select the outside line):

- Lift the receiver
- The Wait for the dial tone
- The Press the Speed button **SPEED**
- Dial Speed Dial Code

The system will automatically dial the registered number.

Quick Dial (the system selects the outside line):

- ☞ Lift the receiver
- Press the Speed button SPEED
- Dial Speed Dial Code

The system will automatically dial the registered number. This operation will not work unless you register the outside line group number.

Speed Dial Display Scrolling:

If your phone is equipped with a display you may display the Speed Dial Numbers that are registered in both Personal and System Speed Dial. If a name is associated with this number it will also appear.

To display a number:

- The Press the Speed Dial button **SPEED**
- 👁 Dial 🗵
- Dial a Speed Dial code

To scroll up:

👁 Dial 🗐

To scroll down:

🖙 Dial 🗵

To dial displayed number:

Press the Speed Dial button SPEED

Station Coaching

Station Coaching includes two actions: Monitoring and whisper paging (hereafter called 'whisper monitor'). A digital key telephone is able to whisper monitor a digital key telephone after invoking the Monitor feature. The Monitoring station can whisper monitor other stations while on an outside call or an intercom call and press the 🗈 key to speak to the monitored station without the calling station hearing.

Operation

To use the Station Coaching feature while monitoring an outside call or an intercom call:

Press the key

The monitoring station is now able to speak with the monitored station without the calling station hearing.)

To return to call monitoring while using the Station Coaching feature:

 \sim Press the key

(The monitoring station returns to a monitoring state and cannot speak to the monitored call.)

To barge-in while monitoring a station on an outside call or an intercom call:

Press the ADD key(The monitoring station is now part of the conversation.)

To barge-in while whisper monitoring a station on an outside call or an intercom call:

Press the * key

The Press the **ADD** key.

(The monitoring station is now part of the conversation.)

Station External Ringer Connection

Allows for the connection of an external ringer through an IX-LRSP to provide loud ringing on incoming calls.

Operation

The None
Station Restriction Password

You may enter a personalized password to prevent anyone from using your phone when you are not present. The password must be programmed through system programming and may be six digits in length.

Operation

To restrict your phone:

- Press the Speaker button **SPKR**
- The Wait for the dial tone
- The Press the Feature button **FEAT** then dial
- 0r
- Press the Lock button LOCK if assigned as a Multipurpose button
- Dial the password
- Wait for a confirmation tone
- Press the Speaker button SPKR

To cancel restriction at your phone:

- Press the Speaker button SPKR
- The Wait for the dial tone
- $\overset{\circ}{=}$ Press the Feature button **FEAT** then dial \bigcirc 4
- Or
- Press the Lock button LOCK if assigned as a Multipurpose button
- Dial the password
- The Wait for a confirmation tone
- Press the Speaker button SPKR

Text Messaging

Allows you to send text messages to the display of another system extension.

System Text Messages

Allows you to have access to frequently used messages that are common to everyone in the office. The messages may be 16 characters in length. A maximum of 90 may be stored in system memory.

Station Text Messages

Allows you to program up to 10 frequently used messages for either one-touch or abbreviated access. The messages may be 16 characters in length.

Station Text Message Registration

To register Station Text Messages:

- The Press the Feature button **FEAT**
- The Press the Text Message multipurpose button **TXT MSG**
- Total the desired Personal Text Message Code
- Enter the desired message contents up to 16 characters in length. Use the following keys on your telephone for text message data entry:

Press	1	2	3	4	5	6	7	8	9	0	HOLD	#
1X	-	Α	D	G	っ	М	Р	Т	W	Q	write character	lower case
2X	•	В	Е	Н	Κ	Ν	R	U	Х	Ζ	cancel	upper case
											character	
3X	sp	С	F	- 1	L	0	S	V	Y	8		
4X	1	2	3	4	5	6	7	8	9	0		

The Press the Feature button **FEAT** to end the operation

To register several Text Messages:

After entering a text message:

- @ Press the Text Message multipurpose button **TXT MSG**
- Tial the next Personal Text Message Code 90-99
- Repeat the same procedure as above

To Send a Text Message

To send a registered text message, perform one of the following operations:

Digital Telephone User's Guide - 100

Busy Bypass Text Message Operation

To select and send a busy bypass text message to another system extension:

- The While calling a busy or idle extension
- Press TXT MSG
- TXT MSGn.

To respond to a busy bypass text message while on a call:

- While on a call with a busy bypass text message on your display
- Tress TXT MSG +
- Enter the desired text message number OO -99, or press TXT MSGn.
- Press TXT MSG

To delete a busy bypass text message from your display:

- Thile a text message is on your display
- $Press TXT MSG + # + \times$

Manual Signaling Text Message Operation

To select and send a manual signaling text message to another system extension:

- Lift the receiver
- Press TXT MSG
- Enter the desired text message number OO-99, or press TXT MSGn.
- The Enter the desired extension number, or press **DSS** or **CCV**.

Group Text Message Operation

To select and send a text message to a text message group:

- Lift the receiver
- Press TXT MSG
- Enter the desired text message number OO-99, or press TXT MSGn.
- Tress the **MSGGPn** Text Message Group key.

Stored Text Message Operation

To select and send a stored text message to another system extension:

- The While calling a busy or idle extension
- Tress TXT MSG
- Enter the desired text message number OO-99, or press TXT MSGn.
- There are the second se

To display a stored text message:

- TXT MSG key red LED lit
- The Press **TXT MSG** + # to display a stored text message

To responded to a stored text message by calling the originating extension:

- With you **TXT MSG** key red LED lit
- Press TXT MSG + # to display a stored text message
- Press # a second time to call the station that sent the text message.

Scrolling and Selecting Text Messages

To scroll through the available system text messages:

- The receiver.
- ${}^{\mbox{\tiny Press}}$ Press [TXT MSG] + [*]
- ☞ Select a text message number ○○-⑨⑨

Digital Telephone User's Guide - 102

Time Reminder

Allows you to be reminded that it is a certain time. You are reminded by hearing tones that are generated from the phone's speaker. If your phone has a display the word Reminder will also appear. The time must be entered in military time.

Operation

To set the time:

- ${\mathscr P}$ Press the Speaker button **SPKR**
- The Wait for the dial tone
- The Press the Feature button **FEAT** then dial **1**
- 0r
- Press the Time Reminder button TM REMD
- Dial the time in military time H H : M M
- The Wait for a confirmation tone
- Press the Speaker button SPKR

- Press the Speaker button **SPKR**
- The Wait for the dial tone
- $^{\ensuremath{\mathscr{C}}}$ Press the Feature button **FEAT** then dial \bigcirc 4 1
- 0r
- $\overset{\circ}{=}$ Press the Time Reminder button **TM REMD** then dial $\stackrel{\bullet}{=}$
- The Wait for a confirmation tone
- Press the Speaker button SPKR

Tone/Voice Calling

The calling mode for intercom calls may be switched between voice and tone signaling. ADIX-VS may be programmed to allow either the calling party or the called party to have control of the signaling mode.

Operation

Calling party control:

- Dial intercom extension number
- 👁 Dial 🗷

Called party control:

- The Press the Feature button **FEAT** then dial 65
- 0r
- Press the Tone button V/T if assigned as a Multipurpose button and the lamp will be solid red

Transfer Off Premise

Transfer Off-Premise allows any user to transfer a call to an outside party by using the TRAN key followed by a trunk group access code.

Operation

While speaking on an outside line call:

- Press TRAN and wait for transfer tone
- Tress **FLT, CO** or dial a CO group access code
- Dial the external phone number.
- The Wait for the external party to answer
- Hang up or press **CONNECT** to complete the transfer.
- If the external party does not answer press TRAN to retrieve the original call from hold

Transfer to Guest Mailbox

Transfer to Guest Mailbox allows access to mailboxes that are not associated with specific ADIX-VS extensions.

Operation

To access a Guest Mailbox:

- Press ICM + either the VOICE MAILBOX ACCESS key or mailbox access code.
- The mailbox number.
- These **CONNECT** or go on-hook to connect

Digital Telephone User's Guide - 104

Unanswered Incoming Outside Line Warning Tone

After a programmable time, incoming calls will ring with a different tone to warn you that your call is now in the delayed ringing mode at another extension.

Operation

None

Universal Night Answer

Allows you to answer calls that have been switched to ring at the Night Mode location.

- The receiver
- The Wait for the dial tone
- Press the Feature button FEAT then dial 36
- 0r
- Press the Universal Night Answer button UNA if assigned as a Multipurpose button

Voice Mail Message

ADIX-VS comes equipped with Omega-Voice VMI Voice Mail. For information on Omega-Voice VMI and message management functions, please refer to Section 6 of this manual.

Voice Mail Monitor (Answering Machine Emulation)

Station users may monitor voice mail messages as they are recorded. During recording monitor, the station user may select to initiate a conversation with the caller. You may program your extension for Automatic Monitor or User Initiated Monitor. You may also activate or deactivate this feature from your extension.

Operation

To initiate Voice Mail Monitoring:

- The answered by voice mail at an idle station:
- Tou will hear a Monitor Tone
- The Press the Voice Mail Monitor button **VMMNT**
- The Voice Mail Monitor button VMMNT red LED will begin to flash
- When the Voice Mail Monitor button VMMNT green LED lights, you will hear the caller's message as it is recorded.

To cancel Voice Mail Monitoring:

- Hang up or press **SPKR**
- The Voice Mail Monitor button VMMNT red LED will begin to flash
- The voice mail message will be saved.

To begin a conversation with the caller during monitor (other programming required):

- The While listening to the caller record a message
- The Press the Voice Mail Monitor button VMMNT
- The Voice Mail Monitor button VMMNT green LED will turn off
- ☞ Begin speaking with the caller.
- The voice mail message will be deleted.

To Activate /Deactivate or change the voice mail monitor mode:

- This while your station is idle press **SPKR**
- Press the Voice Mail Monitor button VMMNT
- Press 1 to deactivate/activate Voice Mail Monitoring
- Press 2 to set the mode as Manual
- \sim Press 3 to set the mode as Automatic.

Whisper Page

The Whisper Page feature allows ADIX-VS station users to communicate with busy extensions. This feature is available from any ADIX-VS digital key telephone, SLT, or Attendant station. When a busy station is called using the Whisper Page feature, the busy station will hear the voice announcement via the handset receiver. Neither the whisper page, nor the busy station's response is audible to the outside calling party.

Operation

To Whisper Page a busy station:

- The After calling a busy station and receiving busy tone
- Press [*]

To communicate with a station that whisper paged your extension:

- The After receiving a whisper page
- Press [*]
- You may now communicate with the station that sent you the whisper page. The other calling party cannot hear your conversation
- To resume speaking with the original caller, press [*] a second time.

To send a text message while being whisper paged:

Press the **TEXT MSG** + the text message number

OR

Press the preprogrammed **TEXT MSGn** key

For additional information on how to send text messages, please reference *Text Message* on page 100.

Whisper Page During Consultation Hold

You can now use Whisper Page during consultation hold. When a user tries to transfer a call to a busy station and thus temporarily places the call on consultation hold, the station can send a whisper page to the busy station. This feature allows the transferring party to announce a call to a busy station and then camp-on the call in one step.

Operation:

- Operation for shifting to whisper page state After busy signal press [*]
- Whisper page toggle change
 During whisper page press [*]
- To select and send a text message to the originating Whisper Page station

After you receive a whisper page:

- Press the Text Message button [TEXT MSG] + text message number (00 – 99)
 - or
- Press the Preprogrammed Text Message button [TEXT MSGn]
- To scroll through the available system text messages
 - Go off hook and press the Text Message button [TEXT MSG]
 - 2. Press [*]
 - 3. Enter a system text message number 00-89
 - When a message displays, press [#] to scroll forward and [*] to scroll backward

- To select and send a manual signaling text message to the originating Whisper Page station
 - 1. After you receive a whisper page
 - Press the Text Message button [TEXT MSG] + text message number (00 – 99) or
 - Press the Preprogrammed Text Message button [TEXT MSGn]
 - 2. Dial an extension number or press a DSS key or Call Coverage key
- To delete a text message from your display
 - 1. Press the Text Message button [TEXT MSG] when a text message displays
 - 2. Press [#]
 - 3. Press [*]
- To send a Whisper Page during consultation hold
 - 1. Press [*] and announce the call
 - 2. If the busy station wishes to take the call, hang up to camp-on the call

Digital Telephone User's Guide - 110

Section 4 -Attendant Position Features

Attendant Position - Basic Features

Receiving an Incoming Call

There are two ways you may answer incoming calls; either with the receiver in the cradle or with the receiver not in the cradle.

Operation

To answer calls with the receiver in the cradle:

- When your phone rings and the outside line button(s) flash red:
- The receiver and you will be connected to the outside caller
- The outside line button will flash green.

Transferring a Call to Another Extension

There are two ways you may transfer calls; either using the Transfer button or using the Direct Station Selection Unit.

Operation

Using the Transfer button:

- Transfer button **TRAN** and the lamp will flash red
- ☞ Wait for the dial tone
- Dial the desired extension number
- Announce the call
- 🖙 Hang up

Using the Direct Station Selection Unit:

- Press the button on the Direct Station Selection Unit representing the desired extension
- Announce the call
- Hang up

Transferring a Second Call to an Extension

Operation

When transferring a call to a busy extension:

Hang up

The extension user will hear a beep (camp-on) tone to inform them of the second call. If the extension user does not respond to the beep tone the call will return to the Attendant Position.

Attendant Position Features - 113

Receiving an Intercom Call

Internal or intercom calls will flash the lamp on the Operator button **OPER** at the Attendant Position.

Operation

To answer intercom calls with the receiver in the cradle:

Lift the receiver

Putting a Call on Hold

Operation

To put a call on Hold:

Press the Hold button HOLD/DND and the lamp will intermittently flash green on the outside line button

Picking Up a Call on Hold

Operation

To retrieve a call on Hold:

Press the green intermittently flashing button representing the call that you wish to speak with

Putting a Call on Call Park

When you cannot locate an extension user you may page the desired individual. This feature allows the outside call to be automatically placed on Call Park when the Page button is depressed. The display on the DSS will show which park number the call has been placed on to allow the attendant to announce where the call is parked.

Operation

When speaking to an outside party:

- Press and hold the Page button PAGE and the lamp will flash red
- Make an announcement stating which park number the call is on
- Release the page button PAGE to disconnect the paging circuit

Answering a Call that Returns to the Attendant Position

Calls that were transferred and not answered, on Hold or Call Park too long, will ring at the attendant position.

Operation

To answer a call that returns to the Attendant Position:

Making an Outgoing Call

Operation

- The receiver
- The Press the desired outside line and the lamp will flash green
- The Wait for the dial tone
- Dial the desired phone number

Making an Intercom Call

Operation

- The receiver
- The Wait for the dial tone
- Dial the desired extension number
- 0r
- Press the designated button for the desired extension number on the Direct Station Selection Unit

Making an E-Response Help Call

The E-Response Help Call feature allows specific system extensions to simultaneously call a group of extensions and access a system paging port upon dialing a specific ICM Group access number or, if the station remains off-hook without dialing for a programmable period of time. When the E-Response help call is placed, the key telephone displays of the called extensions in the E-Response ICM Group will display a programmed message and the calling party's extension number and station ID.

Operation

Dial the E-Response Group access number when you hear the Intercom Dial Tone.

Attendant Position Features - 115

Making a Page Announcement

Operation

- Lift the receiver
- Press and hold the Page button PAGE and the lamp will flash red
- The Wait for the Page tone
- Make an announcement
- Release the Page button PAGE to disconnect the paging circuit

Attendant Position - Advanced Features

911 Call Indication

When a system extension dials 911, the extension number of the station calling 911 will be displayed on the LCD of the attendant station. If E911 Routing is not successful, a "FAIL" indication will be displayed on the LCD. The alarm tone will sound at the attendant position when LCD indication is made. In order to clear the display, the Attendant must press a 911 Display Clear Key programmed on the extension.

Caller ID, ANI, DNIS Storage - Delete All

Allows you to delete all stored call records from system memory.

Operation

- Press the Speaker button SPKR
- Press the Call Storage Delete button UAD
- Enter your station password
- Wait for confirmation tone
- The Press the Speaker button **SPKR**

Alarm Clear

Allows you to clear alarm indication(s).

Operation

- The Press the Speaker button **SPKR**
- The Wait for the dial tone
- ${\mathscr P}$ Press the Feature button **FEAT**
- The Dial # 7
- Press the Speaker button SPKR

Attendant Automatic Hold

Allows you to place your current conversation on Hold automatically by pressing a button representing a new call to be answered.

Operation

To place a call on Hold without using the Hold button HOLD/DND:

Press the button representing the new call

Attendant Position Features - 117

Attendant Override

Allows you to notify an extension user that is in Do Not Disturb that you wish to speak with them. The extension user is notified by tones through the speaker of a Digital Telephone and the ringing of a Single Line Telephone.

Operation

When calling an extension that is in Do Not Disturb:

- Do not hang up
- ${\mathscr P}$ Press the Override button **OVER**
- The Wait for a reply

Automatic Answer Mode

Allows you to direct outside calls to be answered by a prerecorded message. There are two answering modes for this feature. For example, this feature can be used to inform outside callers that the office is closed for the day. This feature requires the use of the Message Card. A programming option may be enabled to allow ADIX-VS to automatically switch to the Automatic Answer Mode at a certain time. You must manually switch the system to the normal mode.

Operation

To turn Automatic Answer Mode on:

- Press the Automatic Answer Mode button AUTO and the lamp for that button will be flashing red for Mode 1 (Day Mode)
- Press the Automatic Answer Mode button AUTO a second time and the lamp for that button will be solid red for Mode 2 (Night Mode)

To turn Automatic Answer Mode off:

Press the Automatic Answer Mode button AUTO until the lamp for that button is off

Clock Set/Adjustment

Allows you to change the time for the system clock.

Operation

To change the time:

- Press the Speaker button **SPKR**
- The Wait for the dial tone
- The Press the Feature button **FEAT** then dial ⁶
- \mathcal{P} Dial the time in military time **H H : M M**
- The Wait for a confirmation tone
- Press the Speaker button SPKR

To adjust seconds to zero:

- Press the Speaker button **SPKR**
- The Wait for the dial tone
- \checkmark Press the Feature button **FEAT** then dial 64
- \bigcirc Dial $\stackrel{\scriptstyle{\scriptstyle (1)}}{\scriptstyle{\scriptstyle (2)}}$ to adjust seconds to zero
- $\overset{\circ}{=}$ Dial $\stackrel{\bullet}{=}$ again to start the clock with zero seconds
- The Wait for a confirmation tone
- The Press the Speaker button SPKR

If the seconds shown on the DSS are less than 30, the minutes digit will remain the same. If the seconds shown on the DSS are greater than 30, the minutes digit will advance one digit.

Direct Station Selection

Allows you to have one-touch access to call extensions.

Operation

When you wish to call an extension:

- Lift the receiver
- The Wait for the dial tone
- Press the Direct Station Selection button for the desired extension

Incoming Call Termination

Outside lines may be programmed to appear individually on Multi-purpose buttons or they may be grouped together to appear on one or several Multipurpose buttons.

Operation

None

Flexible Call Forward (Internal/ External)

Use the new Flexible Call Forward feature to forward calls to an internal destination or external line using Personal Speed Dial numbers 90-99. The user can set separate call forward destinations for Intercom Incoming and Outside Line Incoming calls. With this feature, you may set all Intercom calls to forward to your cell phone and set all outside calls to forward to your voice mail. The Flexible Call Forward feature also incorporates Follow Me capabilities. Follow Me lets you receive your calls internally at any station you choose.

Operation

Set Forward Destination

- 6. Lift the handset or press [SPKR]
- 7. Press [FWD].
- 8. Enter the Call Type you wish to forward
 - 1 = All calls (Outside Line/Intercom)
 - 2 =Outside Line calls only
 - 3 = Intercom calls only
- 9. Enter the Flexible Call Forward Mode
 - 1 =All calls to another extension or hunt group
 - 2 = Busy/No Answer calls to another extension or hunt group
 - 3 = No Answer calls to another extension or hunt group
 - 4 = All calls forward to an external number using Personal Speed Dial Codes 90-99
- 10. Complete one of the following steps:
 - If you chose Mode 1, 2, or 3, enter the extension or hunt group number
 - If you chose Mode 4, enter the Personal Speed Dial Code

Attendant Position Features - 120

Note: When the setting is valid, you hear a confirmation tone. When it is invalid, you hear a warning tone.

- Forward Cancel
 - 5. Lift the handset or press **SPKR**
 - 6. Press FWD
 - 7. Press 🗈
 - 8. Enter the Call Type number you wish to cancel
 - 1 = Cancel Forwarding of All calls (Outside Line/Intercom)
 - 2 = Cancel Forwarding of Outside Line calls only
 - 3 = Cancel Forwarding of Intercom calls only

Set Active/Inactive

- 3. Press FWD
- 4. Enter the Call Type you wish to forward
 - 1 = All calls (Outside Line/Intercom)
 - 2 = Outside Line calls only
 - 3 = Intercom calls only

Set Follow Me Destination

- 4. Lift the handset or press **SPKR**
- 5. Press **FWD** + **FWD**
- 6. Enter the Call Type you wish to forward
 - 1 = All calls (Outside Line/Intercom)
 - 2 =Outside Line calls only
 - 3 = Intercom calls only
- 7. Enter the extension number of the originating forwarding station.

Night Mode

Allows you to change the ringing termination point for outside lines. This alternate point might be a loud bell, a phone or a group of phones. A programming option may be enabled to allow ADIX-VS to automatically switch to the Night Mode at a certain time; however, you must manually switch the system back to the normal mode.

Operation

To place the system in Night Mode operation:

- The Wait for the dial tone
- Press the Night Mode button NIGHT and the lamp for that button will be solid red
- ☞ Wait for a confirmation tone
- Press the Speaker button SPKR

To disable Night Mode operation:

- Press the Speaker button SPKR
- The Wait for the dial tone
- Press the Night Mode button NIGHT and the lamp for that button will be off
- The Wait for a confirmation tone
- Press the Speaker button SPKR

Operator Priority

The system operator has the ability to override any ringing or voice announce intercom call or paging call. This occurs when calls are made simultaneously, or another party other than the operator makes the call first.

Overflow Transfer

Allows you to limit the number of calls waiting to be answered at the Attendant Position. Once the maximum number of calls is reached, all additional calls will automatically forward to another location.

Operation

To register the Overflow Transfer position:

- Press the Speaker button **SPKR**
- The Wait for the dial tone
- Press the Feature button FEAT
- Press the Override button OVER
- Dial the extension number
- The Wait for a confirmation tone
- Press the Speaker button SPKR

To set the maximum number of calls:

- Press the Speaker button SPKR
- Wait for the dial tone
- Press the Feature button FEAT
- 📽 🛛 Dial 🗐
- Dial the number of calls you wish to have waiting with two digits
- *[∞]* Wait for a confirmation tone
- Press the Speaker button SPKR

System Speed Dial Registration

You have the ability to register (program) the 90 System Speed Dial numbers. The numbers may be 32 digits in length and may include the insertion of a pause.

Operation

Follow the same procedure as Station Speed Dial for the Digital Multi-line Telephone. To register the system numbers dial the System Speed Dial codes ranging from $\bigcirc \bigcirc - \bigcirc \bigcirc \bigcirc$ to represent the outside phone numbers.

System Text Message Registration

If your telephone or DSS is programmed with a Text Message button, you have the ability to register (program) the 90 System Text Messages. The messages may be 16 characters in length.

Operation

- Press the Feature button FEAT
- $\$ Press the Text Message button **TXT MSG**
- Dial the desired System Text Message Code OO_89
- Enter the desired message contents up to 16 characters in length. Use the following keys on your telephone for text message data entry:

Press	1	2	3	4	5	6	7	8	9	0	HOLD	#
1X	1	Α	D	G	し	М	Р	Т	W	Q	write character	lower case
2X		В	Е	Н	Κ	Ν	R	U	Х	Ζ	cancel	upper case
											character	
3X	sp	С	F	-	L	0	S	V	Y	8		
4X	1	2	3	4	5	6	7	8	9	0		

The Press the Feature button **FEAT** to end the operation

To register several Text Messages:

After entering a text message:

- Tress the Text Message button **TXT MSG**
- ${}^{\textcircled{T}}$ Dial the next System Text Message Code $O_{-\beta}$
- Repeat the same procedure as above

Attendant Position Features - 124

Section 5 -Single-Line Telephone User's Guide

Single-Line Telephone - Basic Features

Note: The Feature Access Codes listed in the section are the default settings. Actual operation depends on the programming in your ADIX-VS system database.

Making an Outgoing Call

- Lift the receiver
- Dial the access code for an outside line (assigned by the system installer)
- ☞ Wait for the dial tone
- Dial the desired phone number

If you make a dialing mistake, hang up and try again.

Receiving an Incoming Call

Operation

When your phone rings:

 $\$ Lift the receiver and you will be connected to the call

Making an Intercom Call

Operation

- Lift the receiver
- The Wait for the dial tone
- Dial the desired extension number

Receiving an Intercom Call

Operation

When your phone rings:

The receiver and you will be connected to the call

Single-Line Telephone User's Guide - 127

Making an E-Response Help Call

The E-Response Help Call feature allows specific system extensions to simultaneously call a group of extensions and access a system paging port upon dialing a specific ICM Group access number or, if the station remains off-hook without dialing for a programmable period of time. When the E-Response help call is placed, the key telephone displays of the called extensions in the E-Response ICM Group will display a programmed message and the calling party's extension number and station ID.

Operation

- Lift the receiver and remain off hook on intercom for a specific time period programmed in the system.
- 0r
- Lift the receiver to make an intercom call. Begin dialing. Between digits stop dialing for more than 10 seconds.

Note: If a user dials a valid trunk access or optimized routing access code, this feature will not activate.

- 0r
- Dial the E-Response Group access number when you hear the Intercom Dial Tone.

Transferring a Call to Another Extension

Operation

When speaking on an outside line:

- The Press and release the receiver button quickly
- The Wait for the dial tone
- Dial the desired extension number
- Thang up or announce the call, then hang up

If the call is not answered it will return to your phone.

Putting a Call on Hold

Operation

When speaking on an outside line:

- The Press and release the receiver button quickly
- Dial the Exclusive Hold code 508
- 📽 Hang up

A call placed on Hold may only be picked up by the extension that placed the call on Hold.

Picking Up a Call on Hold

Operation

- The receiver
- Dial the Exclusive Hold code 508 and you will be connected to the call

Single-Line Telephone User's Guide - 129

Putting a Call on Call Park

Call Park is similar to Hold but allows others to retrieve a call from another extension.

Operation

When speaking on an outside line:

- Press and release the receiver button quickly
 - The Wait for the dial tone
 - Tial the Call Park code 512
- The Wait for a confirmation tone
- Hang up

To pick up a call on Call Park at your extension:

- The receiver
- Dial the Call Park code 512 and you will be connected to the call

To Park a call at another extension:

- Thile on a call
- Tial the Transfer to Call Park code
- Dial the extension number of the extension where you want to park the call.
- Thang up the receiver

To pick up a call on Call Park from another extension:

- The receiver
- Tial the Call Park Pick-Up code 513
- Dial the extension number of the extension that placed the call on Call Park

To pick up a call on Call Park at the attendant position:

- Lift the receiver
- Total the number announced by the attendant

Handling a Second Call

Operation

While on an outside or intercom call, if you receive a second call and do not want to hang up on the first call:

- ^(*) Place the first call on Hold or Call Park
- \mathcal{P} Hang up or press the receiver button
- Answer the second call

To return to the first call:

Dial the Hold or Call Park code

Single-Line Telephones - Advanced Features

Account Code

When speaking on an outside line:

- Press and release the receiver button quickly
- \checkmark Dial the Account code 547
- Dial the desired account code
- 👁 Dial 🗵
- The Press and release the receiver button quickly

Busy Intercom Callback

Operation

When you make an intercom call and the extension is busy:

- To not hang up
- The Press and release the receiver button quickly
- Wait for the dial tone
- Dial the Busy Intercom Callback code 518
- The Wait for a confirmation tone
- ൙ Hang up

- Lift the receiver
- The Wait for the dial tone
- Dial the Cancel code 501
- Dial the Busy Intercom Callback code 518
- The Wait for a confirmation tone
- 🖙 Hang up

Busy Number Callback

Operation

When you dial an outside number and there is no answer or a busy signal:

- Do not hang up
- Press and release the receiver button quickly
- The Wait for the dial tone
- Dial the Busy Number Callback code 507
- The Wait for a confirmation tone
- Hang up and ADIX-VS will call you back periodically to try calling again

To change the callback interval:

Dial the desired interval time in minutes before you hang up

When your phone rings:

The receiver

The number will automatically be dialed

- The receiver
- The Wait for the dial tone
- ☞ Dial the Cancel code 501
- Wait for a confirmation tone
- 🖙 Hang up

Busy Outside Line Queuing

Operation

When attempting to make an outside call and all lines are busy:

- Do not hang up
- Press and release the receiver button quickly
- \Im Wait for the dial tone
- Dial the Busy Outside Line Queue code 506
- The Wait for a confirmation tone
- 📽 Hang up

ADIX-VS will call you back when an outside line becomes free. If you previously dialed the outside number, that number will automatically be dialed when the receiver is picked up.

- Lift the receiver
- The Wait for the dial tone
- Dial the Cancel code 501
- Dial the Busy Outside Line code 506
- The Wait for a confirmation tone
- 📽 Hang up
Call Forwarding

To use this feature you must first program your phone to the desired extension where you want your calls to be sent.

To set the forwarding extension:

- Lift the receiver
- \bigcirc Wait for the dial tone
- Dial the Call Forward Code 522
- Total the extension number where you want your calls sent
- *The Wait for a confirmation tone*
- Hang up

Your phone will be set in the All Calls Forward mode (or the last mode set).

To change the forwarding condition:

All Calls

Forward all calls to another extension automatically.

- The receiver
- The Wait for the dial tone
- The Call Forward Mode Change code 521
- The Dial
- The Wait for a confirmation tone
- 📽 Hang up

Busy/No Answer

Forward all calls when you are busy on another call or do not answer a call.

- The receiver
- The Wait for the dial tone
- ☞ Wait for Call Forward Mode Change code 521
- Dial 2
- Wait for a confirmation tone
- Thang up

No Answer

Forward calls only when the extension does not answer within a certain time period.

- The receiver
- The Wait for the dial tone
- The Wait for Call Forward Mode Change code 521
- 👁 Dial 🕄
- The Wait for a confirmation tone
- Hang up

Follow Me

When you move to a different extension, you may change the forwarding destination from the extension originally set to the extension which you are now using.

- Lift the receiver
- The Wait for the dial tone
- Total the Call Forward Follow Me code 520
- Dial your extension number
- *The Wait for a confirmation tone*
- Hang up

To cancel:

- The receiver
- Wait for the dial tone
- ☞ Dial the Cancel code 501
- Dial the Call Forward code 522 and your phone will return to normal operation
- 📽 Hang up

Remote Call Forward

You may program your telephone to forward calls to a remote number.

To set destination:

- The receiver
- The Wait for the dial tone
- The External Call Forward code The Internal Call Forward code
- Dial a personal speed dial number 90-99
- The Wait for a confirmation tone
- Hang up

To set mode:

- Lift the receiver
- The Wait for the dial tone
- The Call Forward Mode Change code 521
- ☞ Dial 4 to forward all calls
- Dial 5 to forward outside calls only
- To forward internal calls only
- The Wait for a confirmation tone
- Hang up

Call Park/Swap

When you have a call on Call Park and are involved in a second conversation and wish to alternate between conversations:

- Press and release the receiver button quickly
- Dial the Call Park code 512 and you will be connected to the call that was on Call Park and the second call will be placed on Call Park

You may continue to alternate between conversations by repeating the above procedure.

Call Pick-Up

There are three types of Call Pick-Up: Direct Call Pick-Up, Internal Group Call Pick-Up, and External Group Call Pick-Up.

Direct Call Pick-Up

Allows you to answer a call ringing at any extension in the office.

- ☞ Lift the receiver
- $\overset{\mbox{\tiny \ensuremath{\mathbb{T}}}}{\mbox{-}}$ Wait for the dial tone
- The Direct Call Pick-Up code 511
- Tial the extension number of the ringing phone

Internal Group Call Pick-Up

Allows extensions to be grouped together. This eliminates the need to dial the ringing extension number to answer the call.

- The receiver
- Wait for the dial tone
- To Dial the Internal Group Call Pick-Up code

External Group Call Pick-Up

Allows you to answer a call ringing in a Group Call Pick-Up group that they are not part of.

- The receiver
- The Wait for the dial tone
- ☞ Dial the External Group Call Pick-Up code 510
- Tial the External Group external group number

Camp-On

When you want to transfer a call to an extension that is busy:

- To not hang up
- The Press and release the receiver button quickly
- The Wait for the dial tone
- Dial the desired extension number
- Hang up

To answer a Camp-On call:

- Hang up on the first call
- Answer the second call
- Or
- Place the first call on Hold or Call Park
- Thang up or press the receiver button
- Answer the second call

Clear Call

When you make an intercom call, but the called extension cannot be reached, and you wish to call another extension:

- Do no hang up
- Dial the second extension number

Conference

Add-On

(up to 1 outside & 3 inside parties or 4 inside parties)

While speaking on an outside or intercom call:

- The Press and release the receiver button quickly
- To bial the extension number of the party you wish to add
- When the party answers, press and release the receiver button quickly

After you hear a tone, all parties will be connected. To add another extension, repeat the same procedure.

Multi-Line

(Up to 3 outside & 1 inside parties)

While speaking on an outside call:

- The Press and release the receiver button quickly
- Dial the Exclusive Hold code 508
- The Press and release the receiver button quickly
- Dial the second outside party
- $\ensuremath{\mathfrak{P}}$ Wait for the second party to answer
- $\ensuremath{\mathfrak{P}}$ Press and release the receiver button
- Dial the Conference Code 516 and all parties will be connected

To add the 3rd outside line, repeat the same procedure.

Trunk-To-Trunk

(Up to 2 outside parties)

When you are speaking with two outside parties in a Multi-line Conference call and wish to leave the conversation:

- The Press and release the receiver button quickly
- Dial the Conference code 516
- 👁 Hang up

To get back in the Multi-line Conference:

- Lift the receiver
- The Wait for the dial tone
- Dial the Exclusive Hold code 508 and you will be connected to the original conference call

Consultation Hold

Operation

While on an outside call, press and release the receiver button quickly

Do Not Disturb

Operation

To turn on:

- Lift the receiver
- Wait for the dial tone
- Tial the Do Not Disturb code 523
- The Wait for a confirmation tone
- Hang up

To turn off:

- The receiver
- The Wait for the dial tone
- $\overset{\circ}{=}$ Dial the Cancel code 501
- Dial the Do Not Disturb code 523
- The Wait for a confirmation tone
- 🖙 Hang up

Flash

Operation

For Long Flash:

- The Press and release the receiver button quickly
- ☞ Dial the Long Flash code 514
- Dial new number

For Short Flash (*Centrex or PBX use*):

- The Press and release the receiver button quickly
- ☞ Dial the Short Flash code 515
- Dial new number or feature code

Floating Outside Line Group Access

Operation

- The receiver
- The Wait for the dial tone
- Dial the outside line group number O1_6O or OO for the desired group

Flexible Call Forward

Operation

- Set Forward Destination
 - 1. Lift the handset
 - 2. Enter the Call Forward Activation Code
 - 3. Enter the Call Type you wish to forward
 - 1 = All calls (Outside Line/Intercom)
 - 2 = Outside Line calls only
 - 3 = Intercom calls only
 - 4. Enter the Flexible Call Forward Mode
 - 1 = All calls to another extension or hunt group
 - 2 = Busy/No Answer calls to another extension or hunt group
 - 3 = No Answer calls to another extension or hunt group
 - 4 = All calls forward to an external number using Personal Speed Dial Codes 90-99

- 5. Complete one of the following steps based on your previous selection:
 - If you chose Mode 1, 2, or 3, enter the extension or hunt group number
 - If you chose Mode 4, enter the Personal Speed Dial

Code

- Set Forward Cancel
 - 1. Lift the handset
 - 2. Enter the Call Forward Cancel Code
 - 3. Enter the Call Type number you wish to cancel
 - 1 = Cancel Forwarding of All calls (Outside Line/Intercom)
 - 2 = Cancel Forwarding of Outside Line calls only
 - 3 = Cancel Forwarding of Intercom calls only
- Set Follow Me Destination
 - 1. Lift the handset
 - 2. Enter the Call Forward Destination
 - 3. Enter the Call Type you wish to forward.
 - I = All calls (Outside Line/Intercom)
 - 2 =Outside Line calls only
 - 3 = Intercom calls only
 - 4. Enter the extension number of the originating forwarding station

Forced/Verified Account Code

Operation

- The receiver
- Dial the access code for an outside line (assigned by the system installer)
- The Wait for the dial tone
- $\ \ \, \mathbb{P}^{\mathbb{P}}$ Dial the desired phone number
- 🔊 Dial 🗵
- The Wait for the account code entry tone
- Dial a code
- To Dial \times only if your code entry is variable in length

Group Park

Operation

To place a call in Group Park:

- The Press and release the receiver button quickly
- The Wait for the dial tone
- Total the Group Park code
- Hang up

To retrieve a call in Group Park:

- The receiver
- $\overset{\circ}{=}$ Wait for the dial tone
- Dial the Group Park code

Hot Line

Operation

If your telephone is programmed for use as a Hot Line:

Lift the receiver, and you will automatically call the preprogrammed extension

Howler Tone

Operation

The Replace the receiver on the receiver button

Last Number Redial

Operation

- The receiver
- $\overset{\mbox{\tiny \ensuremath{\mathbb{T}}}}{\mbox{-}}$ Wait for the dial tone
- ☞ Dial III and ADIX-VS will dial the last outside number dialed
- 0r
- Dial the Last Number Redial code 505 if you have a Rotary Dial Telephone

Master Hunt Groups

Operation

To call a Hunt Group:

- Lift the receiver
- The Wait for the dial tone
- $\ensuremath{\mathfrak{P}}$ Dial the Hunt Group access code

Message Waiting

Operation

To leave a message:

- When the extension you are calling is busy or does not answer:
- Do not hang up
- The Press and release the receiver button quickly
- The Wait for the dial tone
- ☞ Dial the Message code 519
- *The Wait for a confirmation tone*
- Hang up

To cancel a message:

If you want to cancel a message you left at another extension:

- The receiver
- The Wait for the dial tone
- ☞ Dial the Cancel code 501
- ☞ Dial the Message code 519
- Total the extension number
- The Wait for a confirmation tone
- 🖙 Hang up

To answer messages:

When the message lamp on your phone is flashing:

- The receiver
- $\overset{\mbox{\tiny \ensuremath{\mathbb{T}}}}{\mbox{-}}$ Wait for the dial tone
- Dial the Message code 519 and ADIX-VS will automatically call the extension that left the message

Off-Hook Outgoing Call

Operation

Lift the receiver and ADIX-VS will automatically dial the outside number

Off-Hook Outside Line Queuing

Operation

To wait for an outside line:

The stay on the line until you hear the dial tone

Paging

All Call

Allows you to make an announcement either through the speakers in the Digital Telephones or an External Paging System.

- Lift the receiver
- The Wait for the dial tone
- Total the All Call code (assigned by the system installer)
- The Wait for the Page tone
- Make an announcement
- 🖙 Hang up

Group Call (Internal)

Allows you to page through the speaker in a group of phones.

- Lift the receiver
- $\ \ \,$ Wait for the dial tone
- Total the Group Call code (assigned by the system installer)
- The Wait for the Page tone
- The Make an announcement
- Hang up

Zone Page (External)

Allows you to access individual groups of external speakers.

- ☞ Lift the receiver
- The Wait for the dial tone
- Total the Zone Page code (assigned by the system installer)
- The Wait for the Page tone
- Make an announcement
- 🖝 Hang up

Meet-Me Page Answer

Allows you to answer a page from any phone that is in the same Meet-Me Page Answer group.

- Lift the receiver
- The Wait for the dial tone
- Dial the Meet-Me Page Answer code 524 and you will be connected to the extension that made the page

Pre-Ringing

This programming option allows calls to Single Line Telephones to receive a short ring before the normal ring signaling begins. This feature helps reduce the noise level in the office environment.

Operation

The None

Private Line

Operation

None

Protected Extension

Operation

None

Shift Call

Operation

When you make an intercom call, but the called extension cannot be reached, and you wish to call another extension:

- Do not hang up
- Total the last digit of the next desired extension number

Single Line Message Waiting Stutter Dial Tone

When a Single Line Telephone that has a message goes off-hook, the ADIX-VS automatically sends an intermittent tone for 2 seconds before normal dial tone is heard. This feature alerts you of messages.

Operation

- From the telephone's idle state, go off hook.
- The message exists, you will hear a stutter dial tone.

Speed Dial

Personal Speed Dial Registration

To register Personal Speed Dial Numbers (with an outside line group):

- The receiver
- Wait for the dial tone
- The Dial the Speed Dial Registration code 504
- Tial the Personal Speed Dial code
- The Wait for the beep tones
- The Dial the outside line group $\bigcirc 1 \bigcirc \bigcirc$ or $\bigcirc \bigcirc$
- The Wait for the dial tone
- Dial the phone number
- Hang up

Repeat the procedure to enter additional numbers.

To register Personal Speed Dial Numbers (without an outside line group):

- Lift the receiver
- The Wait for the dial tone
- Dial the Speed Dial Registration code 503
- ☞ Dial the Personal Speed Dial code 90_99
- The Wait for the dial tone
- Total the phone number
- 🖙 Hang up

Repeat the procedure to enter additional numbers.

To register a pause:

When registering the telephone number, at the place where you want to insert a pause:

- 🖙 Dial 🗵
- \bigcirc Dial $\boxed{1}$ \bigcirc for the desired pause time in seconds

To register the \square symbol in a number:

When registering the telephone number, at the place where you want to insert a $\boxed{}$:

☞ Dial 💌

To Speed Dial A Number

If you have a Touch-tone Phone:

- The receiver
- The Wait for the dial tone
- 👁 🛛 Dial 🖿
- Total the Speed Dial code

The system will automatically dial the registered number.

If you have a Rotary Dial Phone:

- Lift the receiver
- The Wait for the dial tone
- Dial the Speed Dial Access code 502
- Total the Speed Dial code

The system will automatically dial the registered number.

Station Restriction Password

To restrict your phone:

- Lift the receiver
- Wait for the dial tone
- The Station Restriction Password code 527
- Dial your password
- 🖙 Hang up

To cancel restriction at your phone:

- ☞ Lift the receiver
- $\ensuremath{\mathfrak{T}}$ Wait for the dial tone
- Dial the Cancel code 501
- Dial the Station Restriction Password code 527
- Dial your password
- 🖙 Hang up

Tone/Voice Calling

Operation

To switch the calling mode to a Digital Telephone:

- Total the extension number
- 👁 Dial 📕

Unanswered Incoming Outside Line Warning Tone

Operation

None

Universal Night Answer

Operation

- Lift the receiver
- \Im Wait for the dial tone
- Dial the Universal Night Answer code 546 and you will be connected to the incoming call

Section 6 – Omega-Voice VMI User's Guide

Omega-Voice VMI Basic Features

Mailbox Access

To retrieve a message from your mailbox using the MBOX key:

- While the MBOX button lamp is flashing red:
- Lift the receiver
- The Wait for the dial tone
- The Press the **MBOX** button
- The mailbox pass code

To retrieve a message from your mailbox using the MSG key:

When the Message button **MSG** lamp is flashing red:

- Lift the receiver
- The Wait for the dial tone
- The Press the Message button
- 🖙 Dial 📕

The system will automatically call your voice mail mailbox.

To access your mailbox from your extension (no message waiting):

- The Press the VHUNT key or dial your voice mail access code.
- The When the VMI answers press the # key.
- The Enter your mailbox when prompted.
- Unless you select zero as your pass code, the Omega-Voice VMI always requests your pass code.

Omega-Voice VMI User's Guide - 153

Transfer to Voice Mail

To transfer a call to a mailbox:

- Press the Transfer button TRAN
- The Wait for the dial tone
- Dial the Mailbox access code
- Dial the desired extension number or press the button representing the desired extension if assigned as a Multipurpose button
- Or
- Press the Mailbox button MAILBOX if assigned as a Multipurpose button
- Dial the desired extension number or press the button representing the desired extension if assigned as a Multipurpose button
- 0r
- Press the Transfer button TRAN
- The Wait for the dial tone
- Press the **MBOX** button (of the mailbox you wish to transfer) if assigned as a Multipurpose button

Forward to Voice Mail

To forward your calls to your mailbox:

- Press the Speaker button **SPKR**
- The Wait for the dial tone
- ${\ensuremath{\,^{\ensuremath{\mathbb{P}}}}}$ Press the Call Forward button $\ensuremath{\textbf{FWD}}$
- \checkmark Dial the Voice Mail access code \Box
- Wait for a confirmation tone and the Forward lamp will stay lit
- Press the Speaker button SPKR

All calls will go immediately to your mailbox.

Mailbox Tutorial

To set up your mailbox you must record a mailbox name, greeting, and select a pass code. The first time you access your mailbox the Omega-Voice VMI provides a Mailbox Setup Tutorial to help you setup your mailbox. You may press 9 to deactivate the tutorial. To access the Mailbox Tutorial later, press 6 from the User Options Menu.

Main User Menu

When you enter your mailbox you will hear the Main User Menu. Press

- Play first new message
- T Access Message Folder Menu
- The Make a message
- The Access User Options Menu
- The Access System Management Menu
- Select Notification Schedule
- Return to System Greeting
- The Exit voice mail

Message Folder Menu

Use the *Message Folder Menu* to access your message folders. The Omega-Voice VMI provides the following message folders:

- Thew message folder
- ☞ ② Saved message folder
- Archive message folder
- Receipt message folder
- Deleted message folder
- The Image of the I

Make a Message for Another User

You can quickly record and send messages to other users. To send a message to another user or a list:

- ☞ ① Access your mailbox.
- The Press 2 to record a message for another user.
- Record your message when prompted.
- Press # to stop recording.
- Figure 10 Press 4 to send it to another user ,or Press 5 to send it to a Distribution List.
- The function of the mailbox or list number and press #.
- \sim 7 Press 1 to send the message.

Omega-Voice VMI User's Guide - 155

User Options Menu - Mailbox Setup

The *User Options Menu* provides access to different features based on the mailbox's defined Class of Service and User Privileges. Use this menu to setup your mailbox.

- Record mailbox name
- The Image and the Access Mailbox Greeting Management Menu
- ☞ ③ Change mailbox pass code
- Access Distribution List Menu
- The Access Blocking and Forwarding Menu
- Access Mailbox Setup Tutorial
- T Set time/date stamp format
- ☞ [®] Set message replay order
- **B** Return to **Main User Menu**

Mailbox Name

Your recorded mailbox name identifies your mailbox throughout the system. After you record the mailbox name, you will be prompted to enter the first few letters of both your first and last name. You may enter up to 6 digits for each name. **To record your mailbox name:**

- Access your mailbox.
- The Press to access the User Options Menu.
- \sim Press 1 to record a new name.
- The Record your name when prompted.
- \sim Press 4 to save it.
- The second secon
- The Enter the first few digits of your last name when prompted.

Mailbox Greeting Management

Your mailbox greeting identifies your mailbox to outside callers. Outside callers hear your *Active Greeting* when they first reach your mailbox. The *Active Greeting* is initially greeting one. **To record a mailbox greeting:**

- Access your mailbox.
- Press 3 to access the User Options Menu.
- The Press 2 to access the Mailbox Management Menu.
- \Im Select 2 to record a new greeting.
- The set of the set of
- Record your greeting when prompted.
- $\ \ \, \mathbb{P}$ Press $\overline{\#}$ to stop recording.
- \sim Press 4 to save it.

Mailbox Pass Code

To select a pass code:

- Access your mailbox.
- The Press to access the User Options Menu.
- ☞ Press ³ to select a pass code.
- Enter the pass code when prompted.
- The Enter the pass code again for verification.

Distribution List Menu

Each user has nine available Distribution Lists with forty available mailbox slots on each list.

- The create a Distribution List
- Add or Delete a mailbox
- Play a Distribution List
- The Image of the I

To create a distribution list:

- ☞ ☐ Access your mailbox.
- Therefore The Press 3 to access the User Options Menu.
- The Press 4 to access the *Distribution List Menu*.
- Press 1 to create a new list.
- \Im Enter the number of the list you wish to create (1-9).
- The Record the list name when prompted.
- $rac{1}{2}$ Press # to stop recording.
- The Press 4 to save it.
- The Press 1 to add mailbox numbers to the list.

To modify a list:

- Access your mailbox.
- The Press to access the User Options Menu.
- Press 4 to access the *Distribution List Menu*.
- \bigcirc Press 2 to add or delete a mailbox.
- The Enter the number of the list you wish to modify (1-9).
- Press 1 to add mailboxes, or
- press 2 to remove mailboxes.
- There mailbox numbers when prompted.

To review a list's members:

- Access your mailbox.
- The Press (3) to access the User Options Menu.
- The Press 4 to access the *Distribution List Menu*.
- ☞ Press ³ play a list's members.
- The Enter the number of the list you wish to review (1-9).
- The VMI will play all of the mailboxes on that list.

Blocking and Forwarding Menu

You may block or forward your extension using the Omega-Voice VMI Call Blocking and Forwarding feature. Call Blocking routes outside callers directly to your mailbox. The Omega-Voice VMI never attempts to ring your extension. Call Forwarding automatically forwards all incoming calls to another designated extension.

- Play the Current Settings
- ☞ 2 Set Call Blocking
- ☞ ③ Set Call Forwarding
- Set Override Option
- The Image of the I

Call Blocking

You may program your station to automatically forward all calls to voice mail using the Call Blocking feature. You may select to block your extension during the Day Mode, Night Mode, or both. **To Call Block your**

extension:

Access your mailbox.

- The Press I to access the User Options Menu.
- The Press (5) to access the Call Blocking and Forwarding Menu.
- The Press 2 access the *Call Blocking Menu*.
- Press 2 to activate blocking during the Day Mode,
 - Press 3 to activate blocking during the Night Mode, or Press 4 to activate blocking for both.

To disable the Call Blocking feature:

- Access your mailbox.
- The Press is to access the User Options Menu.
- The Press 5 to access the Call Blocking and Forwarding Menu.
- The Press 2 access the *Call Blocking Menu*.
- The Press to disable the Call Blocking feature.

Call Forwarding

You may program your extension to automatically forward your calls to another extension. As with the blocking feature, you may select to forward your extension during the Day Mode, Night Mode, or both.

To Call Forward your extension:

- Access your mailbox.
- The Press (3) to access the User Options Menu.
- The Press (5) to access the Call Blocking and Forwarding Menu.
- The Press access the *Call Forwarding Menu*.
- Press 2 to activate forwarding during the Day Mode,
 Press 3 to activate forwarding during the Night Mode, or
 Press 4 to activate forwarding for both.
- The extension to receive your calls.

To disable the Call Forwarding feature:

- Access your mailbox.
- The Press (3) to access the User Options Menu.
- The Press (5) to access the Call Blocking and Forwarding Menu.
- The Press access the Call Forwarding Menu.
- The Press 1 to disable the Call Forwarding feature.

You may need to review your selected Call Blocking and Call Forwarding selections. **To review the current settings:**

- Access your mailbox.
- The Press The User Options Menu.
- The Press (5) to access the Call Blocking and Forwarding Menu.
- \sim Press 1 to play the current settings.

Time/Date Feature

You can turn the message Time/Date Stamp off or on. If you turn off the Time/Date Stamp, the Omega-Voice VMI plays the message without first announcing the time and date. To obtain the time and date for a message you can press ^B. When the Time/Date Stamp is turned on, the VMI plays it before playing the message. The Omega-Voice VMI is initially programmed to play the time and date stamp for all messages in all mailboxes.

To change the time and date stamp format for messages:

- Access your mailbox.
- The Press (3) to access the User Options Menu.
- \bigcirc Press 7 to select the time/date stamp.
 - Press 1 to turn on the Time/Date stamp.
 - Press 2 to turn off the Time/Date stamp.
- The VMI confirms that your selection has been saved.
- Tour selection will apply to all messages.

Message Replay Order

You may select the replay order of your messages, either first-in, first-out (FIFO) or last-in, first-out (LIFO). When FIFO is selected the oldest message is played first. When LIFO is selected the newest message is played first.

To select the message replay order for message folders:

- Access your mailbox.
- The Press (3) to access the User Options Menu.
- Press ⁶ to select message play back order.
 - Press 🔟 to play oldest message first.
 - Press 2 to play newest message first.
- The VMI confirms that your selection has been saved.
- Your selection will immediately apply to all messages in all folders except the receipt folder. The oldest message in the receipt folder will always play first.

Omega-Voice VMI User's Guide - 162